



2020 SSI SPORT/SKI & FISH



# **CHAPARRAL BOATS**

**OWNER'S/OPERATORS MANUAL**

**P.O. DRAWER 928**

**300 INDUSTRIAL PARK BLVD.**

**NASHVILLE, GA 31639**

**PHONE: (229) 686-7481 FAX (229) 686-3660**

This manual has been compiled to help you operate your boat with safety and pleasure. It contains details of the craft; typical equipment supplied or fitted its systems and information on its operation and maintenance. Please read it carefully and familiarize yourself with your boat before using it.

If this is your first boat, or you are changing to a new type, for your own comfort and safety please ensure that you obtain handling and operating experience before “assuming command” of the boat. Your dealer or national sailing federation or yacht club will be pleased to advise you of local sea schools or competent instructors.

**Please keep this manual in a secure place and hand it over to the new owner when you sell the craft.**

For a complete list of standard and optional features and equipment, consult your local Chaparral dealer. Due to a policy of continual product improvement, specifications are subject to change without notice. The weights and volumes shown are estimated and can vary from boat to boat because of equipment, etc.

Chaparral boats meet or exceed both NMMA and U.S. Coast Guard standards.

**REV: OCTOBER 2019**



# 2020 SSI SPORT/SKI & FISH



## **Model Information**

This manual contains information on the following models:

- 19 SSI SPORT
- 19 SSI SKI & FISH
- 19 SSI OUTBOARD SPORT
- 19 SSI OUTBOARD SKI & FISH
- 21 SSI SPORT
- 21 SSI SKI & FISH
- 21 SSI OUTBOARD SPORT
- 21 SSI OUTBOARD SKI & FISH
- 23 SSI SPORT
- 23 SSI OUTBOARD
- 24 SSI SPORT



The information refers to standards and options available for the 2020 model year.

**Thank you for selecting a Chaparral SSI model!**



# 2020 SSI SPORT/SKI & FISH



## Table of Contents

<b>Model Information</b> .....	<b>i</b>	Bilge Blower .....	45
<b>(1) Introduction</b> .....	<b>1</b>	Running and Navigation Lights .....	45
Welcome Aboard .....	1	Docking Lights .....	45
About This Manual .....	1	Stereo Sound System .....	45
Construction and Standards.....	2	Wakeboard and Tower Holders.....	46
Responsibilities .....	4	<b>(5) Underway</b> .....	<b>48</b>
Laws and Regulations .....	5	Transporting Your Boat.....	48
Owner’s Logs and Records.....	6	Launching and Loading.....	50
Warranty Policy Transfer .....	6	Boarding Your Boat.....	51
Customer Satisfaction .....	7	Fueling .....	53
Boat Data Record .....	8	Operating Your Boat .....	54
Fuel Usage Chart.....	9	Anchoring Your Boat .....	57
Travel Plan Log .....	10	Mooring Your Boat .....	59
<b>(2) Boating Safety</b> .....	<b>11</b>	Shutting Down the Engine.....	59
Hazard Communication.....	16	<b>(6) Preventive Maintenance and Repair</b> .....	<b>60</b>
Safety Recommendations .....	16	Engine .....	60
Safety Equipment.....	19	Tune Up.....	61
Running and Navigation Lights.....	20	Fuel System.....	61
Safety Afloat .....	20	Monthly Inspection.....	61
Water Sports .....	27	Propeller .....	61
<b>(3) Systems</b> .....	<b>30</b>	Steering System .....	61
Electrical Systems .....	30	Bilge .....	62
Fuel Systems .....	31	<b>(7) Interior and Exterior Care</b> .....	<b>63</b>
Freshwater System.....	32	Fiberglass and Gelcoat .....	63
Marine Sanitation Devices.....	33	Hull Bottom Maintenance.....	64
<b>(4) Components</b> .....	<b>42</b>	Hardware and Fittings .....	64
Dashboard and Instrument Panel .....	42	Windshield and Portholes .....	64
Steering .....	43	Carpet.....	64
Throttle .....	43	Seat Coverings and Vinyl.....	65
Power Trim.....	44	Canvas (Weather Coverings).....	66
Fire Extinguishers.....	44		
Automatic Fire Extinguisher .....	44		
Bilge Pump.....	45		



# 2020 SSI SPORT/SKI & FISH

---



<b>(8) Winterizing and Storage .....</b>	<b>67</b>
Lifting the Boat.....	67
Dry Storage Preparation .....	67
Systems and Components .....	68
Engine .....	68
Fuel System .....	68
Battery .....	68
Recommissioning.....	80
<b>(9) Warranty.....</b>	<b>81</b>



## INTRODUCTION

1

### **WELCOME ABOARD**

#### **Congratulations!....**

on your wise decision to purchase a Chaparral boat. We welcome you to the family of thousands of other Chaparral boat owners. Since your boat is a substantial investment, we are sure you selected your Chaparral because of its value, style, comfort, and performance. This manual contains valuable information concerning your boat's operation, maintenance, and care, plus tips on boating safety and seamanship.

### **ABOUT THIS MANUAL**

More and more people are joining the ranks of boat owners. This manual is written for the first-time boat owner or operator. Even if you are an experienced boater, you will find much valuable information regarding the safe operation and maintenance of your new Chaparral boat. Keep this manual on your boat for ready reference.

Due to our policy of continuous product improvement, the illustrations used in this manual may not be identical to the components, controls, gauges, etc. on your boat, as they are intended to be representative reference views. Some controls, indicators, or information may be optional and not included on your boat model.

The precautions in this manual cannot and do not cover every boating situation. If a specific method or procedure is not covered, you must make sure that what you do is safe for you and others. Always use common sense when boating! Remember, too, that every safe boating excursion is a happy experience.

This manual is part of your boat's equipment. Print a copy and keep it on board the boat at all times. If you transfer ownership of this boat to someone else, be sure to give this manual to the new owner

Your owner's packet contains the manual for the boat selected. Also, in this packet are instruction manuals from the suppliers of standard and optional equipment for your boat. Examples of these manuals include the engine, electrical equipment, pumps, and cabin amenities. The suppliers of these products maintain their own manufacturer's warranty and service facilities. Be sure to fill out each warranty card and mail it to the manufacturer to validate the warrant. Record all information regarding these products on the "Boat Date Record." A copy of this form is near the end of this chapter under Logs and Records.

**Important: keep the complete Boat Data Record in a safe place at home. Do not keep it aboard the boat.**

Read this manual as well as the manuals for the systems and components on your Chaparral boat. They provide the information needed for safe operation and proper maintenance. The information in the manuals provided by the manufacturers takes precedence over any information in this manual if there is a conflict.

Following are summaries of each chapter in this manual:

#### **1. Introduction**

Included in this chapter is a summary of the manual plus general information about construction and standards, dealer and owner responsibilities, laws and regulations, logs and records, and the warranty for your boat.

#### **2. Boating Safety**

This chapter discusses potential hazards associated with boating, safety recommendations, safety information and practices, and water sports safety. It also discusses safety equipment needed to provide a safe operating system



# 2020 SSI SPORT/SKI & FISH



**Note:** For your safety, this manual has specific safety warnings and comments where appropriate. Be sure to read the entire manual.

## 3. Systems

Here you will find detailed information about the electrical and fuel systems needed to operate your boat.

## 4. Components

Standard features and optional equipment for your Chaparral boat are discussed in this chapter. In general, these pertain to equipment and amenities which make your boat a “home away from home.”

## 5. Underway

The intent of this chapter is to explain what you need to do before, during, and after your boating excursion to make it an enjoyable and safe experience.

## 6. Preventive Maintenance and Repairs

Preventive maintenance is the key to trouble-free operation and helps protect your investment. This chapter explains what you should do to maintain your boat and how to make adjustments and repairs.

## 7. Interior and Exterior Care

This chapter tells you how to inspect, clean, and maintain your boat’s interior and exterior.

## 8. Winterizing and Storage

What do you do when you need to winterize or store your boat for extended periods of time? This chapter provides the necessary information.

## CONSTRUCTION AND STANDARDS

All Chaparral boats meet or exceed the construction standards set by the U.S. Coast Guard, the National Marine Manufacturers Association (NMMA), and the American Boat and Yacht Council (ABYC) concerning

- Navigation Lights
- Factory installed fuel systems
- Engine and fuel tank compartment ventilation
- Flotation
- Steering systems
- Backfire flame arresters
- Wiring specifications

NMMA certification means that the boat complies with applicable federal regulations set forth by the U.S. Coast Guard. These regulations are based on American Boat and Yacht Council (ABYC) standards and recommended practices.

All Chaparral models can be certified to carry the CE mark. The CE mark certifies that the boat meets relevant parts of the European Directive for Recreational Craft 94/25/EC of the European Parliament, including the International Organization for Standards (ISO) and Recreational Marine Agreement Group (RMAG) guidelines in effect at the time of manufacture.

We recommend that you see your dealer if you wish to modify factory-installed equipment or add new equipment. Your dealer is qualified to make such modifications or additions without placing the safety or design integrity of your boat at risk and without invalidating the warranty. Chaparral builds exceptionally high quality boats. We offer numerous extras you won’t see at a boat show. We’ve created a list for your review.



# 2020 SSI SPORT/SKI & FISH

---



## **Gelcoat**

The advanced technology polyester we use offers superior weathering resistance to surface yellowing and chalking. It will also help protect and maintain the original glossy luster of your boat's finish. Chaparral uses a premium quality gelcoat which offers improved flexibility over other gelcoats, minimizing the potential for cracking.

## **Resin**

It's an age-old problem. Water penetrates the gelcoat and blisters the bottom. The key is the resin. To cut costs, most use a general purpose resin. Chaparral uses a premium quality resin in the hull skin coat of every boat in our line because of its superior bonding characteristics and exceptional flex.

## **Plywood**

The plywood Chaparral uses throughout our boats is pressure treated with a wood preservative and fungi inhibiting chemical before it is kiln dried.

## **Loom Wrap Wiring**

Attention to rigging detail is a Chaparral hallmark. Instead of routing the engine wiring harness haphazardly in the bilge in black tape, we rely on automotive style flexguard loom that not only keeps things neat but also protects against abrasion.

## **Through Bolted Stainless Steel Cleats**

It's one of the most often used components on your boat, but most people think a cleat is a cleat, right? Wrong. Chaparral's cleats are stainless steel so they won't corrode and so they won't twist. Also, ours are big enough to accept a full-sized looped line.

## **Heavy Duty Rub Rail**

A rub rail is supposed to protect your boat. Chaparral uses a heavy-duty PVC rub rail with stainless steel insert that absorbs far more impact without denting.

## **Acoustical Foam**

The name says it all. Acoustical foam is the best way we've found to absorb engine noise.

## **Acrylic Tops**

Ours are acrylic because it's a superior material that won't crack, peel, or mildew. Further, our acrylic tops won't shrink or expand, which means they look and fit better in all weather conditions.

## **Stain Resistant Fabrics**

Accidents happen. Spilled drinks, wet bathing suits and soggy towels are a fact of life on a boat. All our cabin fabrics are stain resistant. Buyers can choose from a wide variety of colors. When it comes to interior fabrics, we have the one that's right for you.

## **Superior Plastics vs. Wood**

Chaparral prides itself on building seats that are not only comfortable, but durable. We use plastic seats because they hold their shape and don't retain water, reducing the potential for foam deterioration.

## **Flotation Requirements**

All Chaparral boats meet or exceed U.S. Coast Guard requirements for flotation



## **RESPONSIBILITIES**

Chaparral's quality service does not end when you buy one of our boats. Through our dealer network we do everything possible to ensure that you are satisfied with your purchase. Every Chaparral dealer has a responsibility to you, the boater.

### **Dealer**

Dealer responsibilities include the following:

1. Discuss with you the terms of all warranties and stress the importance of registering warranties with the appropriate manufacturers.
2. Explain how you can obtain warranty service.
3. Complete new boat and pre-delivery inspection procedures. Sign the form to certify that all items were completed.

Your Chaparral dealer can provide you with thorough instruction in the operation of your boat. Please feel free to ask for assistance.

### **Boat Owner**

Your responsibilities include the following:

1. Read this manual as well as all other manuals and information included in your owner's packet.
2. Schedule an appointment with your dealer to go over all warranties. Keep a record of the hull number for future reference.
3. Inspect the boat at the time of delivery to make sure all systems and components are operating properly. Chaparral recommends that you refer to your engine warranty for initial inspection and service requirements.

The new boat and pre-delivery inspection form (found towards the back of this chapter) will help you as you inspect your new boat. After completing your inspection, sign the form to certify you have inspected the boat with your dealer.

4. Schedule an appointment with your dealer to go over the pre-delivery engine service record. Sign this record to indicate your dealer has explained this record to you.
5. Operate all equipment in accordance with the manufacturer's instructions.
6. Become familiar with all federal, state, and local laws affecting your boat and its operation.
7. Perform or provide for the appropriate periodic maintenance outlined in the manuals and service guides.



## **LAWS AND REGULATIONS**

This section of the manual includes general information about government regulations. You, the boater, are responsible for complying with the requirements of federal, state, and local laws. If you have any questions, contact the U.S. Coast Guard or other appropriate authority.

### **Boat Registration**

Federal and state laws require that every boat having propulsion machinery of any type must be registered in the main state of usage. Registration numbers and validation stickers must be displayed on the boat according to regulations. The registration certificate must be carried on board when the boat is in use.

### **Safety Equipment**

The following equipment is required on all boats:

- Display of Registration Numbers
- Fire extinguishers
- Personal flotation devices (PFD's)
- Navigation lights
- Visual distress signal
- Sound signaling device

See Chapter 2 for more information about safety equipment.

### **Discharge of Oil**

The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into or upon the navigable water of the United States or the waters of the contiguous zone if such discharge cause a film or sheen upon, or a discoloration of, the surface of the water or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty.

### **Disposal of Plastics and Other Garbage**

Plastic refuse dumped in the water can kill fish and marine wildlife and can foul vessel propellers and cooling water intakes. Other forms of waterborne garbage can litter beaches and cause illness. U.S. Coast Guard regulations therefore strictly prohibit dumping plastic refuse or other garbage mixed with plastic into the water anywhere. Further, the regulations restrict the dumping of other forms of garbage within 12 miles from shore on the east coast, and 9 miles from shore on the west coast.

Within 3 miles of shore and in U.S. lakes, rivers, bays, and sounds, it is illegal to dump plastic, dunnage, lining, and packing materials that float; and any garbage except dishwater, gray water, and fresh fish parts.

Between 3 and 12 miles it is illegal to dump plastic, dunnage, lining, and packing materials that float; and any garbage not ground to less than one square inch.

Between 12 and 25 miles it is illegal to dump plastic, dunnage, lining, and packing materials that float.

Beyond 25 miles it is illegal to dump plastic.

The U.S. Coast Guard has issued these regulations to implement Annex of the International Convention for the Prevention of Pollution from Ships, 1973, commonly known as Annex V of the MARPOL (Marine Pollution) Treaty 73/78. They apply to all U.S. vessels wherever they operate (except waters under the exclusive jurisdiction of a state), and foreign vessels operating in U.S. waters out to and including the Exclusive Economic Zone (200 miles).

If your boat is 26 feet or more in length, the regulations require U.S. recreational boaters attach one or more Coast Guard Trash dumping Restrictions placards to your boat. The placard warns against the discharge of plastic and other garbage with U.S. navigable waters and specifies discharge restrictions beyond the territorial sea (generally within 3 or more nautical miles of shore).



# 2020 SSI SPORT/SKI & FISH



The placard must also contain the warning that a person violating these requirements is liable for civil and criminal penalties. The placard must also state that local regulations may further restrict the discharge of garbage. You may purchase these placards from local marinas, boat dealers, or marine equipment suppliers.

The U.S. Coast Guard has also issued regulations requiring boats to have sanitation system on board to control pollution. Wastes are to be stored in a holding tank or other device, such as Porta-Potti, until the device can be pumped out or otherwise disposed of at a shore facility. Discharging this waste overboard is in most cases prohibited. Check with the Coast Guard regarding regulations in your area.

## **OWNER'S LOGS AND RECORDS**

At the end of this chapter are three (3) forms which you will find very helpful.

Use the **Boat Data Record** to record all important information about your boat and the major components installed. Print a copy and after you have entered all the data, store it in a safe place. **Do not keep this form aboard your boat.**

The **Travel Plan Log** provides a record of your destination, departure and return times, boat description, passenger list, and other information about the trip you have planned. At the bottom of the form is space for listing emergency telephone numbers in case your return is delayed past the expected time. It also has space for indicating information about the person filling this report. Leave the completed form ashore with a responsible person. We recommend you print several copies of this form each boating season to ensure an ample supply.

The **Fuel Usage Chart** is a handy way to record information covering engine hours, fuel consumption, miles traveled, as well as RPM (revolutions per minute), Average MPH (miles per hour), and GPH (gallons per hour).

## **WARRANTY POLICY TRANSFER**

Your Chaparral boat is backed by a Limited Express Warranty. It is important that you are aware of its terms. If a problem arises with your Chaparral boat as a result of workmanship or materials, contact your dealer as soon as possible to determine whether correcting the problem may be covered by the warranty. Please have your hull identification number and necessary model numbers on hand for the items that may need service or repair. Your hull identification number is below the rub rail on the starboard aft corner of your boat.

The Chaparral Limited Warranty Policy may be transferred to subsequent owner(s) providing the Ownership Transfer Record (OTR) is completed and returned to the Chaparral Customer Service Office. The OTR is located after the Chaparral Limited Warranty Policy in Section 11. Subsequent owner(s) will receive the balance of warranty available subject to a \$100.00 deductible per occurrence for claims filed in accordance with the Chaparral Limited Warranty Policy. The Ownership Transfer fee varies depending on the boat model and size. See the Chaparral Ownership Transfer Record for details and associated fees. YOU are responsible for your safety and your boat, as well as the safety of passengers and other boaters.





# 2020 SSI SPORT/SKI & FISH



## Boat Data Record

Purchase Dealership		Service Dealership	
Name _____	Sales Manager _____	Name _____	Service Manager _____
Address _____	Phone _____	Address _____	Phone _____
_____	Fax _____	_____	Fax _____

General	Drive Unit	Notes
Model Name _____ State of Registration _____  Hull Identification Number _____  Boat Name _____  Hull Color(s) _____  Length _____ Beam _____ Weight _____  Draft (Drive Down) _____ Draft (Drive Up) _____	Serial Number _____  <b>Fuel System</b>  Tank Capacity _____  <b>Fresh Water</b>  Tank Capacity _____  <b>Propeller</b>  Manufacturer _____ Pitch _____  Model Number _____	
<b>Engine</b>  Manufacturer _____ Model Name/Number _____  Oil Type/SAE _____ Quarts _____ Filter Type _____  Serial Number _____ Transom Plate Serial Number _____	<b>Battery</b>  Manufacturer _____  Model Number _____	





# 2020 SSI SPORT/SKI & FISH



## TRAVEL PLAN LOG

The boat listed below should return by:  
 \_\_\_\_\_ at the latest.  
 Date Time

If it has not, please call the emergency numbers listed at the right.

Police \_\_\_\_\_  
 Coast Guard \_\_\_\_\_  
 Other Authority \_\_\_\_\_  
 Personal \_\_\_\_\_

### Trip Information

Departure Date/Time \_\_\_\_\_ Departure Location \_\_\_\_\_  
 Return Date/Time \_\_\_\_\_ Return Location \_\_\_\_\_

### Boat Description

Boat Name \_\_\_\_\_ Type \_\_\_\_\_  
 Registration Number \_\_\_\_\_ Manufacturer \_\_\_\_\_  
 Length \_\_\_\_\_  
 Hull Color \_\_\_\_\_ Deck Color \_\_\_\_\_  
 Cabin Color \_\_\_\_\_ Trim Color \_\_\_\_\_

Other Physical Characteristics \_\_\_\_\_

### Engine

Type \_\_\_\_\_ Horsepower \_\_\_\_\_  
 Fuel Type \_\_\_\_\_ Fuel Capacity \_\_\_\_\_

### Safety & Emergency Equipment YES/NO & NUMBER

Life Jackets \_\_\_\_\_ Cushions \_\_\_\_\_ Distress Light \_\_\_\_\_  
 Flares \_\_\_\_\_ Smoke Signals \_\_\_\_\_ Flash Light \_\_\_\_\_  
 Mirror \_\_\_\_\_ Paddles \_\_\_\_\_ Anchor \_\_\_\_\_  
 Food \_\_\_\_\_ Water \_\_\_\_\_ Life Raft \_\_\_\_\_

### Radio

Onboard (Yes/No) \_\_\_\_\_ Type \_\_\_\_\_

Frequencies usually used or monitored. \_\_\_\_\_

### Passenger List (Use another sheet if necessary)

Full Name \_\_\_\_\_  
 Age/Sex \_\_\_\_\_ Phone Number \_\_\_\_\_  
 Complete Address \_\_\_\_\_

Full Name \_\_\_\_\_  
 Age/Sex \_\_\_\_\_ Phone Number \_\_\_\_\_  
 Complete Address \_\_\_\_\_

Full Name \_\_\_\_\_  
 Age/Sex \_\_\_\_\_ Phone Number \_\_\_\_\_  
 Complete Address \_\_\_\_\_

Full Name \_\_\_\_\_  
 Age/Sex \_\_\_\_\_ Phone Number \_\_\_\_\_  
 Complete Address \_\_\_\_\_

**ALWAYS FILL THIS SHEET OUT COMPLETELY—IN AN EMERGENCY ALL INFORMATION MAY BE HELPFUL**



**Label Locations**

The image below shows the typical locations.



Labels can be found on the following pages.



# 2020 SSI SPORT/SKI & FISH



**⚠ DANGER ⚠**  
 ANCHOR MAY MOVE  
 CAUSING BOAT DAMAGE OR  
 SEVERE PERSONAL INJURY  
**SECURE ANCHOR**

A

**⚠ DANGER ⚠**  
 CARBON MONOXIDE IS PRODUCED BY ALL  
 GASOLINE ENGINES AND GENERATOR SETS. AVOID BRAIN  
 DAMAGE OR DEATH FROM CARBON MONOXIDE. KEEP COCKPIT  
 AND CABIN AREAS WELL VENTILATED. AVOID BLOCKAGE OF  
 EXHAUST OUTLETS. SIGNS OF EXPOSURE INCLUDE NAUSEA,  
 DIZZINESS, AND DROWSINESS. SEE BOAT OWNER'S MANUAL  
 FOR MORE DETAILS.

USING SWIM PLATFORM WHILE ENGINE IS RUNNING CAN  
 RESULT IN SEVERE PERSONAL INJURY. TURN OFF ENGINE  
 BEFORE USING LADDER OR PLATFORM.

**⚠ WARNING ⚠**  
 THE OPERATOR OF THIS VESSEL IS RESPONSIBLE FOR  
 THE ACTIONS OF PERSONS IN AND AROUND THIS VESSEL.  
 SAFETY IS THE OPERATOR'S RESPONSIBILITY.

USING SWIM PLATFORM, FORWARD DECK, OR SUN DECK  
 WHILE BOAT IS UNDERWAY COULD RESULT IN SEVERE  
 PERSONAL INJURY. STOP BOAT AND TURN  
 OFF ENGINES BEFORE USING.

AVOID SERIOUS OR FATAL INJURY DUE TO ROTATION OF SEAT.  
 LOCK SWIVEL WHEN SPEED EXCEEDS 5 M.P.H.

INTERRUPT SWITCH MUST BE ATTACHED TO OPERATOR WHILE  
 ENGINE IS RUNNING. QUALIFIED OPERATOR MUST BE IN  
 CONTROL AT ALL TIMES. READ OWNER'S MANUAL BEFORE USE.

### BOATMAN'S CHECK LIST

- For maximum enjoyment and safety, check each of these items  
 BEFORE you start your engine:
- ✓ DRAIN PLUG (Securely in place?)
  - ✓ LIFE-SAVING DEVICES (One for every person on board?)
  - ✓ STEERING SYSTEM (Working smoothly and properly?)
  - ✓ FUEL SYSTEM (Adequate fuel? Leaks? Fumes?)
  - ✓ BATTERY (Fully charged? Cable terminals clean and tight?)
  - ✓ ENGINE (In neutral?)
  - ✓ CAPACITY PLATE (Are you overloaded or overpowered?)
  - ✓ WEATHER CONDITIONS (Safe to go out?)
  - ✓ ELECTRICAL EQUIPMENT (Lights, horn, pump, etc.?)
  - ✓ EMERGENCY GEAR (Fire extinguisher, bailer, paddle, anchor  
 & line, signaling device, tool kit, etc.?)

C

**⚠ WARNING**  
 GASOLINE VAPOUR MAY EXPLODE RESULTING IN  
 INJURY OR DEATH  
 BEFORE STARTING THE ENGINE:

- verify engine space for gas leaks or vapours
- operate blower for 4 minutes
- verify blower operation

**⚠ MISE EN GARDE**  
 LES VAPEURS D'ESSENCE PEUVENT EXPLOSÉES  
 CAUSANT DES BLESSURES OU LA MORT  
 AVANT DE DEMARRER LE MOTEUR:

- vérifier le compartiment moteur pour les fuites ou les  
 vapeurs d'essence
- faire fonctionner le ventilateur pendant 4 minutes
- vérifier l'opération du ventilateur

B

**⚠ WARNING**  
 Boat motion can be erratic.  
 You can fall overboard or be injured by hitting  
 something in or on the boat.  
 All persons must be in cockpit area or cabin and be  
 prepared for sudden boat movement.  
 Use front or bow deck area only during anchoring,  
 mooring or emergencies.

D

**MAXIMUM CAPACITIES**  
**XX PERSONS OR XXXX LBS**  
 XXXX LBS. PERSONS, MOTORS, GEAR  
 XXX HP MAXIMUM  
 THIS BOAT COMPLIES WITH U.S. COAST GUARD SAFETY  
 STANDARDS IN EFFECT ON THE DATE OF CERTIFICATION  
 MANUFACTURER : \_\_\_\_\_  
 MODEL : \_\_\_\_\_  
 CUSTOMIZED DESIGN. TYPE ANYTHING YOU WANT IN HERE  
 VERIFY. BUYER RESPONSIBLE FOR INFORMATION ENTERED.


E



# 2020 SSI SPORT/SKI & FISH



**⚠ WARNING**

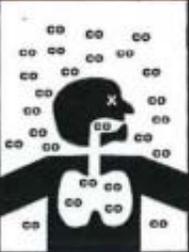

**Carbon monoxide (CO) can cause brain damage or death.**  
Carbon monoxide can be present in the cabin.  
Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness.  
Get fresh air if anyone shows signs of carbon monoxide poisoning.  
Get fresh air if carbon monoxide detector alarm sounds.  
Carbon monoxide detector must be functioning at all times.


F

**⚠ WARNING**

Wet decks are slippery.  
You can be seriously injured if you slip and fall.  
Wear slip resistant footwear secured to your feet and hold on to rails or boat structure.

J

**⚠ DANGER**

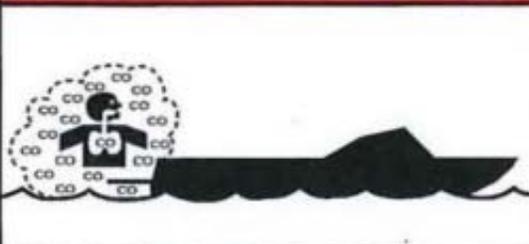

**Carbon monoxide (CO) can cause brain damage or death.**  
Engine and generator exhaust contains odorless and colorless carbon monoxide gas.  
Carbon monoxide will be around the back of the boat when engines or generators are running.  
Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.

16V-206-18

G

**⚠ DANGER ⚠**

**USING SKI EYE FOR TOWING, LIFTING, OR PARASAILING WILL RESULT IN DAMAGE TO BOAT AND SEVERE PERSONAL INJURY**

**USE ONLY TO PULL WATERSKIERS**

K

**⚠ WARNING**

**ROTATING PROPELLER MAY CAUSE SERIOUS INJURY OR DEATH. DO NOT APPROACH OR USE LADDER WHEN ENGINE IS RUNNING.**

H

**⚠ WARNING ⚠**

**SWIM PLATFORM PERSON CAPACITY NOT TO EXCEED 300 LBS.**

**DO NOT USE FOR SUPPORT OF OTHER CRAFT. DO NOT USE WHILE UNDERWAY. READ AND FOLLOW INSTRUCTIONS BEFORE INSTALLATION.**

I




L



# 2020 SSI SPORT/SKI & FISH



M

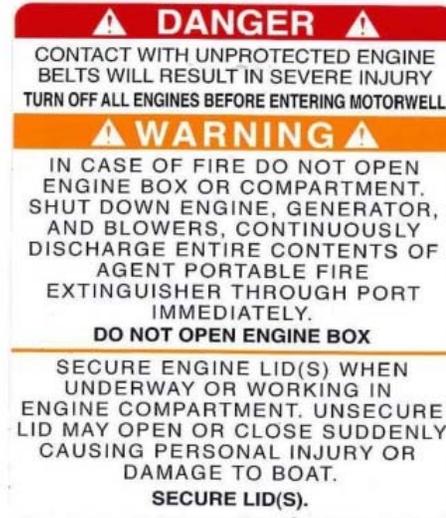

N

**NMMA**<sup>®</sup>


NW-502-17

 **WARNING**


Operating, servicing and maintaining a recreational marine vessel can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, service your vessel in a well-ventilated area and wear gloves or wash your hands frequently when servicing this vessel. For more information go to [www.P65warnings.ca.gov/marine](http://www.P65warnings.ca.gov/marine).




## International Symbols

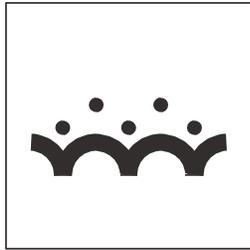

Waste Water Sewage

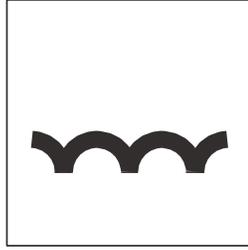


Fresh Water

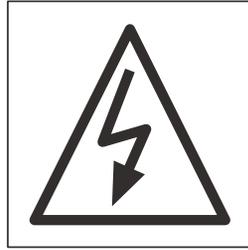


Electrical Hazard

**International labels not included on label location page.**

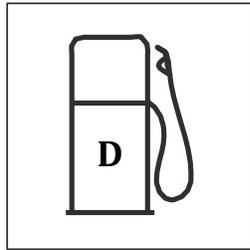

Diesel

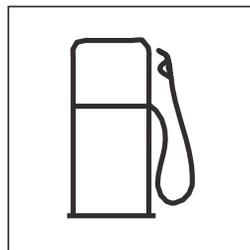

Fuel



**NOTICE**  
When towing a boat on a trailer, Chaparral recommends that the tower stays in the upright installed position to avoid damage to the boat.

**DISCHARGE OF OIL PROHIBITED**  
THE FEDERAL WATER POLLUTION CONTROL ACT PROHIBITS THE DISCHARGE OF OIL OR OILY WASTE INTO OR UPON THE NAVIGABLE WATERS AND CONTIGUOUS ZONE OF THE UNITED STATES IF SUCH DISCHARGE CAUSES A FILM OR SHEEN UPON, OR DISCOLORATION OF, THE SURFACE OF THE WATER, OR CAUSES A SLUDGE OR EMULSION BENEATH THE SURFACE OF THE WATER.  
**VIOLATORS ARE SUBJECT TO A PENALTY OF \$25,000**



## HAZARD COMMUNICATION

As you read this manual, please note the hazard warnings which alert you to safety precautions related to unsafe conditions or operating procedures. We have included these warnings because we are concerned about your safety and the safety of your passengers. Hazard statements generally have five (5) parts:

1. The Hazard Symbol
2. A signal word which indicates the severity of the hazard
3. A concise description of the hazard
4. The results of ignoring the hazard
5. Steps for avoiding the hazard

The three (3) signal words indicating the severity of the hazard are danger, warning, and caution. The meanings they convey are as follows:



**DANGER:** calls attention to immediate hazards that WILL result in severe personal injury or death.



**WARNING:** identifies hazards or unsafe practices that COULD result in severe personal injury or death.



**CAUTION:** indicates hazards or unsafe practices that COULD result in minor personal injury or product or property damage.

**NOTE: This is a general advisory statement relating to equipment operation and maintenance procedures. Its intent is to call attention to information more important than normal text.**

## SAFETY RECOMMENDATIONS

The popularity of boating and other water sports has grown tremendously in the past few years. Boating safety and the safety of your passengers are your responsibilities. You should fully understand and become familiar with the operating procedures and safety precautions in this manual and the other manuals in the owner's packet before you launch your Chaparral boat.

Remember that along with the freedom and exhilaration of boating comes the responsibility that you have for the safety of your passengers and the other boaters who share the water with you. Throughout this manual, specific precautions and symbols identify safety-related information. Be sure to pay close attention to them.

### **Safe Operation**

- Keep your boat and equipment in safe operating condition. Inspect the hull, engine(s), safety equipment, and all boating gear regularly.
- Be very careful when fueling your boat. Be sure you know the capacity of your boat's fuel tank and the amount of fuel you use when operating at frequently used engine speeds (RPMs). Ask your Chaparral dealer about the capacity of your boat's fuel tank.
- Make sure you have enough fuel on board for anticipated cruising requirements. In general, use 1/3 of your supply to reach your destination and use 1/3 to return. Keep 1/3 in reserve for changes in your plans due to weather or other circumstances.



# 2020 SSI SPORT/SKI & FISH



- Be sure lifesaving and fire extinguishing equipment is on board. This equipment must meet regulatory standards and it should be noticeable, accessible, and in safe operating condition. Your passengers should know where this equipment is and how to use it.
- Keep an eye on the weather. Be aware of possible changing conditions by checking local weather reports before your departure. Monitor strong winds and electrical storms closely.
- Always keep accurate, updated charts of the area on board your boat.
- Before you leave the port harbor, file a Travel Plan with a family member, relative, friend, or other responsible person ashore.
- Always operate your boat with care, courtesy, and common sense.
- Instruct at least one other passenger aboard in the basic operating procedures in handling your boat. This person can take over if you unexpectedly become unable to do so.
- Do not allow passengers to ride on parts of your boat other than designated areas.
- Asked all passengers to remain seated while on the boat is in motion.
- Do not use the swim platform or boarding ladder while the engine(s) are running.
- Understand and obey the “Rules of the Road.” Always maintain complete control of your boat.
- Do not overload or improperly load your boat.

The information on your boat’s capacity plate does not override your responsibility for using common sense or sound judgment. Turbulent water and unfavorable weather conditions reduce the capacity of your boat.

## Swimming

1. Swim only in areas designated as safe for swimming. These are usually marked with a swim area buoy (see figure left). Do not swim alone or at night.
2. Do not allow anyone near the propeller(s), even when the engine is off. Propeller blades can be sharp and can continue to turn even after the engine is off. Stay well away from areas marked by a diver down float (see figure right).



## Safe Boating Courses

Your local U.S. Coast Guard Auxiliary and the U.S. Power Squadrons offer comprehensive safe boating classes several times a year. You may contact the Boat/U.S. Foundation at 1-800-336 BOAT (2628), or in Virginia 1-800-245 BOAT (2628). For a course schedule in your area you may also contact your local U.S. Coast Guard Auxiliary or Power Squadron Flotilla for the time and place for their next scheduled class.

U.S. Coast Guard Website: [www.uscg.mil](http://www.uscg.mil)

Power Squadron Website [www.usps.org](http://www.usps.org)



# 2020 SSI SPORT/SKI & FISH



## Voluntary Inspections

State boating officials in many states or the U.S. Coast Guard Auxiliaries offer courtesy inspections to check out your craft. They will check your boat for compliance with safety standards and required safety equipment. You may voluntarily consent to one of these inspections and you are allowed time to make corrections without prosecution. Check with the appropriate state agency or the Coast Guard Auxiliary for details.

## Rules of the Road

All responsible boaters comply with the “Rules of the Road,” the marine traffic laws enforced by the U.S. Coast Guard. There are two sets of rules: The United States Inland Navigational Rules and the International Rules. The United States Inland Rules apply to all vessels inside the demarcation lines separating inland and international waters. The Coast Guard publishes the “Rules of the Road” in its publication “Navigational Rules, International-Inland.” You can get a copy from your local U.S. Coast Guard Unit or the United States Coast Guard Headquarters, 1300 E. Street NW, Washington, D.C. 20226.

Other helpful publications available from the U.S. Coast Guard include “Aids to Navigation” (U.S. Coast Guard pamphlet #123), which explains the significance of various lights and buoys; the Boating Safety Training Manual”, and “Federal Requirements for Recreational Boats.” Check with your local Coast Guard station, your Chaparral dealer, or a local marina about navigational aids unique to your area.

U.S. Coast Guard Website: [www.uscg.mil](http://www.uscg.mil)

Power Squadron Website [www.usps.org](http://www.usps.org)

If you have a marine radio telephone, heed storm warnings and answer any distress calls from other boats. The word “MAYDAY” spoken three (3) times is the international signal of distress. Monitor marine radio channel 16 which is reserved for emergency and safety messages.

You can also use this channel to contact the Coast Guard or other boaters if you have trouble.

**Important: Never send a “MAYDAY” message unless there is a serious emergency and you are in need of immediate assistance.**

## Warning Markers

Always check with local authorities concerning regional hazardous areas and how they are marked. Other considerations include:

- Boat operators must be able to recognize marine flag designs and respond accordingly.
- Caution should always be exercised relative to swimmers. Swimming areas may not always be marked.
- Navigation markers identify navigable routes and indicate water hazards. Boat operators should familiarize themselves with these important navigational tools and operate their boats accordingly.
- Be prepared to assist anyone flying a ‘distress’ flag as they are requesting immediate assistance.

## Drugs and Alcohol

Drugs and alcohol affect a person’s ability to make sound judgments and react quickly. A responsible boater refrains from using drugs or alcohol while operating their boat. Operation of motorized vessels while under the influence carries a significant penalty. Drugs and alcohol decrease your reaction time, impair your judgment, and inhibit your ability to safely operate your boat.



## **SAFETY EQUIPMENT**

Important: Federal law requires you to provide and maintain safety equipment on your Chaparral boat. As the boat owner, you are responsible for supplying all required safety equipment. Consult your Coast Guard, state, and local regulations to ensure your boat has all required safety equipment on board. Additional equipment may be recommended for your safety and that of your passengers. Make yourself aware of its availability and use.

### **Personal Flotation Devices (PFDs)**

There must be one United States Coast Guard approved wearable personal flotation device of Type I, II, or III for each person on board or being towed on water skis, water sports tubes, kneeboards, etc. and one Type IV throwable device on board. The PFDs must be of a suitable size for each person aboard and must be in serviceable condition and readily accessible.

**PFD Type I, Wearable:** This off-shore life jacket has the greatest buoyancy. It is most effective for all waters where rescue may be delayed. Its design allows for turning most unconscious persons in the water from a face down position to a vertical or face-up position.

**PFD Type II, Wearable:** This near-shore buoyant vest provides less buoyancy than a Type I PFD. It is intended for calm inland water or waters where there is a chance of quick rescue. It turns its wearer to a face-up position as does the Type I PFD, but the turning action is not as pronounced as the Type I, and it will not turn as many persons under the same conditions as a Type I.

**PFD Type III, Wearable:** Classified as a flotation aid, this PFD allows wearers to place themselves in a vertical or face-up position in the water. Type III has the same minimum buoyancy as a Type II PFD. It has little or no turning ability. People participating in water sports often prefer this PFD because it is intended for use in waters where quick rescue is possible and it is generally the most comfortable for continuous wear.

**PFD Type IV, Throwable:** You must also have aboard at least one throwable PFD Type IV device. The Type IV device can be thrown to a person in the water and grasped and held by the user until rescued. The design does not allow it to be worn. The most common Type IV PFDs are buoy-ant cushions or ring buoys. This PFD must be immediately available for use and in serviceable condition.

**PFD Type V:** Must be worn to be effective. When inflated, it provides buoyancy equivalent to Type I, II, or III PFDs.

### **Fire Extinguishers**

As the boat owner, you are responsible for making sure you have the required number of fire extinguishers. Fire extinguishers must be approved by the U.S. Coast Guard.

Boats longer than 26 feet and shorter than 40 feet: Two Type B-1 or at least one Type B-2 portable hand extinguishers. If your boat has a fixed fire extinguishing system approved by the U.S. Coast Guard, one Type B-1 extinguisher is required.

Boats longer than 16 feet and shorter than 26 feet: At least one portable hand Type B-I fire extinguisher.

All fire extinguishers should be mounted in a readily accessible location away from the engine compartment. Everyone on board should know where the fire extinguishers are and how to operate them.

If your fire extinguisher has a charge indicator gauge, cold or hot weather may affect the gauge reading. Consult the instruction manual supplied with the fire extinguisher to determine the accuracy of the gauge.

### **Visual Distress Signals**

The U.S. Coast Guard requires all boats operating on U.S. coastal waters have visual distress signal equipment on board. In general, coastal waters include all waters except rivers, streams, and inland lakes. The Great Lakes are considered coastal waters as is a river mouth more than two miles wide. Boats owned in the United States and operating on the high seas must also carry visual distress signal equipment.



# 2020 SSI SPORT/SKI & FISH



Visual distress equipment must be in serviceable condition and stowed in a readily accessible location. Equipment having a date showing useful service life must be within the specified usage date shown. Both pyrotechnic and non-pyrotechnic equipment must be U.S. Coast Guard approved.

Pyrotechnic U.S. Coast Guard approved visual distress signals and associated equipment includes:

- Red flares, hand-held, or aerial
- Orange smoke, hand-held or floating
- Launchers for aerial red meteors or parachute flares.

Non-pyrotechnic equipment includes an orange distress flag and an S-O- S electric distress light.

No single signaling device is ideal under all conditions for all purposes. Consider carrying various types of equipment. Careful selection and proper stowage of visual distress equipment are very important. If young children are frequently aboard, you should select devices with packages which children, but not adults, will find difficult to open.

## **Sound Signaling Device**

Your Chaparral boat must have a device that can produce a sound signal when conditions require. For boats over 26 feet, the device must be able to produce a two-second blast which can be heard a mile away. For boats less than 26 feet, it must be able to produce a two-second blast which can be heard one-half mile away. It can be a hand, mouth or power operated horn or whistle. Refer to the U.S. Coast Guard's publication "Navigational Rules, International-Inland" for details about the appropriate signals.

## **RUNNING AND NAVIGATION LIGHTS**

Your boat must have running and navigation lights for safe operation after dark. Observe all navigation rules for meeting and passing. Do not run at high speeds during night operation. Always use common sense and good judgment.

## **SAFETY AFLOAT**

Once your boat is launched and your excursion is underway, you need to be aware of your surroundings and how they may affect your safety and that of your passengers. There is no substitute for good judgment and common sense.

## **Weather**

Storms rarely appear without advance notice. Check the weather forecast before you begin a day of boating. Be aware, however, that weather conditions can change rapidly. If you have a marine radio, listen to the weather reports issued by the U.S. Coast Guard and others. If you have a portable radio, keep it tuned to a station broadcasting frequent weather reports. Many boating clubs fly weather signals. Learn to recognize these signals and listen to your local forecasts before leaving port.

Your surroundings can also be a good indicator of changing weather conditions. Watch for changes in wind direction or cloud formations. There is no substitute for a good understanding of weather conditions and what to do when the weather takes a turn for the worse.

## **Fog**

Fog is a result of either warm-surface or cold-surface conditions. You can judge the likelihood of fog formation by periodically measuring the air temperature and dew point temperature. If the difference between these two temperatures is small, fog is likely to develop. Remember the following guidelines:

- Turn on running lights.
- Unless your boat is well equipped with charts, head for shore at the first sign of fog and wait until conditions improve. If you have charts on board, take bearings as fog sets in, mark your position, and continue to log your course and speed.
- Make sure all persons on board have put on their personal floatation devices.
- If your boat has sounding equipment, take soundings regularly and match them with depths shown on your charts.
- Station a person forward in the boat as a lookout.



- Reduce your speed. From time to time, stop engine(s) and listen for other fog signals.
- Sound the horn or fog bell intermittently to warn others.
- If there is any doubt in continuing your excursion, anchor. Listen for other fog signals while continuing to sound your fog horn or bell.

## Storms

The present and forecasted weather conditions are a primary consideration, and the possibility of storms should always be a concern. If storms are a possibility, keep a watch on the horizon, especially to the west, for approaching storms. Monitor the weather forecast on a marine channel or local weather station. The best possible situation is to return to a safe port if time allows.

Other steps to follow to weather the storm include:

- Close and secure port holes. Stow all loose gear below deck and tie down any gear on deck.
- Reduce speed as the seas build. Make sure all persons on board have put on their personal floatation devices.
- Trail a sea anchor from the bow. If you do not have a sea anchor aboard, use a canvas bucket, tackle box, or other object that will work like a sea anchor.
- Radar reflectors (if installed on your boat) should be 18 inches diagonally. They should be placed as far above waterline as possible. Other- wise, a boat with radar may have trouble “seeing” your boat.

## Man Overboard

Should someone in the boat fall overboard:

- Act quickly—treat every situation as an emergency.
- Move throttle to idle position and yell “Man Overboard”.
- Immediately throw a Type IV PFD to the person in the water.
- Have someone in the boat assume responsibility for watching the person in the water and keep them in sight while the boat maneuvers back to them.
- Approach the person into the wind and waves. When alongside, put the engine in neutral and throw them a Type IV PFD with a line attached or extend an oar or boat hook.

## Fire

***Important: A fire aboard your boat is a serious emergency. You must act immediately!***

Every boater should develop a fire response plan to determine what kind of fire (fuel, electrical, etc.) might break out, where it might break out, and the best way to react. Having a plan and assigning responsibilities to others results in quicker decisions and quicker reactions.

***Important: Everyone on board should know where fire extinguishers are and how to operate them.***

Any fire requires stopping the engine(s) immediately. Then:

- If equipped, the fire extinguisher system will discharge in the event of a fire. The heat sensitive automatic head will release the extinguishant as a vapor, totally flooding the compartment in fire-killing concentrations. The system indicator light is wired to the ignition and is turned on when the ignition is turned on. The indicator light, located at the dash panel, indicates to the helmsman when the unit has discharged. Under normal operation, the indicator light is lit. If the unit discharges,



the charge light will go out.

- Do not open the hatch to the rigging compartment! The fire will flare up if the fresh air supply increases suddenly.
- Keep the fire downwind if possible. If the fire is aft, head into the wind.
- Have all persons on board put on their personal floatation devices.
- If you can get at the fire, aim the fire extinguisher at the base of the flames and use a sweeping action to put out the fire.
- If the fire gets out of control, make a distress signal, and call for help on the radio.

Deciding whether to stay with the boat or abandon ship will be difficult. If the decision is to abandon ship, all persons on board should jump overboard and swim a safe distance away from the burning boat.

## Guidelines for Fire Prevention



**Warning:** Smoking, poor maintenance, or carelessness when refueling can cause hazardous conditions. Always follow proper refueling procedures for your boat.

- Check the bilge for fuel leaks
- Check cleaning products for flammability
- Ventilate when cleaning or painting
- Disconnect electrical system from power source when performing any type of maintenance
- Use extra caution when using exposed flame around urethane foam
- Extinguish smoking materials carefully
- Ensure ventilation systems are not obstructed
- Use only approved marine cooking and heating systems

- Open flames demand constant attention
- Keep flammable materials in approved containers
- Replace circuit breaker fuse with one of the same amperage
- Electrical appliances must be with rated amperage of boat circuits
- A qualified marine electrician should service the electrical system

## Flooding, Swamping or Capsized Boat

Flooding or swamping is usually caused by the actions of an inattentive boat operator, or by hazardous weather or water conditions. To prevent boat flooding:

- Install drain plug before launching.
- Ensure proper bilge pump operation.
- Do not overload boat.
- Adjust boat speed and trim to match sea and weather conditions
- Close all cabin hatches, door, etc. while underway to prevent flooding due to heavy seas or rain. Ensure proper ventilation to avoid carbon monoxide poisoning. See carbon monoxide hazard information later in this chapter.
- When only using one anchor, it should be attached to the bow of the boat.
- When slowing down or moving in reverse do not allow wake or following seas to flood cockpit.

If your boat becomes swamped or capsizes, put on a PFD immediately and set off a distress signal. Chances are good that a capsized boat will stay afloat. For this reason, stay with the boat. Do not leave the boat or try to swim to shore except under extreme conditions. A capsized boat is easier to see than a swimmer, and the shore may be farther away than it appears.



# 2020 SSI SPORT/SKI & FISH



More often than not, boats sink while docked. Any number of factors may contribute to these sinkings. There may have been a mechanical failure such as a failed bilge pump or an electrical problem such as a dead battery or tripped circuit breaker. Check your boat regularly if it is docked for an extended period of time to make sure everything is in order.

## Hypothermia

Water Temperature (°F)	Exhaustion Unconsciousness	Expected Time of Survival
32.5	Under 15 min	Under 15-45 min
32.5-40	15-30 min	30-90 min
40-50	30-60 min	1-3 HR
50-60	1-2 HR	1-6 HR
60-70	2-7 HR	2-40 HR
70-80	3-12 HR	3 HR – Indefinite
Over 80	Indefinite	Indefinite

If a person falls overboard, hypothermia may be an immediate concern. Hypothermia means a person’s body loses heat to the water faster than the body can replace it. If not rescued, the person will become exhausted or likely drown. In general, the colder the water, the shorter the time for survival. PFDs will increase survival time because they provide insulation.

## Collision

If a serious collision occurs, first check the persons on board for injuries. Then inspect the boat to determine the extent of damage.

- Prepare to help the other craft unless it places your passengers or boat in danger.
- If the bow of the other boat penetrated your boat’s hull, prepare to plug the fracture once the boats are separated.

- Shore up the hole inside your boat with a spare life jacket or cushion.
- While plugging the hole, shift weight to get the hole above the water level.
- If your boat is in danger of sinking, have all persons put on their personal floatation devices.
- If your boat has a radio, contact the U.S. Coast Guard or other rescue authorities immediately (VHF Channel 16 or 22 CB radio).

## Running Around

If you run aground check everyone for injury and inspect damage to the boat and propeller(s). If possible, shift weight of passengers or gear to heel the boat while reversing engine(s). If towing becomes necessary, do not attach tow line to deck cleats. These are not designed to take full load of the boat. Chaparral recommends using a commercial towing service.



**WARNING:** When towing another boat or having your boat towed, make sure the tow line is fastened securely to the bow or transom towing eyes. Never attach tow line to deck cleat or anchor windlass. Cleat or windlass may pull free from deck and cause serious personal injury or property damage.



## Carbon Monoxide Hazard During Operation

Carbon monoxide (CO) in the engine exhaust is a poisonous gas which is odorless, colorless, and heavier than air. Direct prolonged exposure can result in carbon monoxide poisoning which can be harmful and may be fatal.

Indications of excessive exposure to carbon monoxide concentrations may include nausea, dizziness and drowsiness. Carbon monoxide poisoning requires the operator's special and immediate attention! To prevent excess exposure and reduce the possibility of carbon monoxide accumulation in the cabin of the boat, ensure adequate ventilation by opening cabin hatches, cabin doors, cabin windows, and side windshield vents to increase air movement.

Some Chaparral models are equipped with a CO detector. Follow the operating instructions supplied with the CO detector and test the unit to verify that it is functioning properly every time you use your boat. Refer to the information provided by the manufacturer in your owner's packet to determine replacement interval for your CO detector.

The following illustrations show how carbon monoxide can possibly accumulate in your boat while at the dock or underway. Become familiar with these examples and their precautions to prevent dangerous accidents from occurring on your boat.

<b>⚠ DANGER</b>	
	<p><b>Carbon monoxide (CO) can cause brain damage or death.</b></p> <p>Engine and generator exhaust contains odorless and colorless carbon monoxide gas.</p> <p>Carbon monoxide will be around the back of the boat when engines or generators are running.</p> <p>Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.</p> <p style="text-align: right; font-size: small;">NW-206-15</p>

<b>⚠ WARNING</b>	
	<p><b>Carbon monoxide (CO) can cause brain damage or death.</b></p> <p>Engine and generator exhaust contains odorless and colorless carbon monoxide gas.</p> <p>Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness.</p> <p>Get fresh air if anyone shows signs of carbon monoxide poisoning.</p> <p>See Owner's Manual for information regarding carbon monoxide poisoning.</p>

**⚠ WARNING ⚠**


LEAVING WINDOW OPEN WHILE BOAT IS UNDERWAY OR AT DOCK COULD INDUCE EXHAUST FUMES INTO CABIN CAUSING INJURY OR DEATH.

CLOSE WINDOW



**⚠ DANGER**


**DANGER:** Blocked hull exhaust outlets near a pier, dock, sea wall bulkhead or any other means can cause excessive accumulation of poisonous carbon monoxide gas within the cabin areas. Make sure hull exhaust outlets are not blocked. (Figure 2.1)

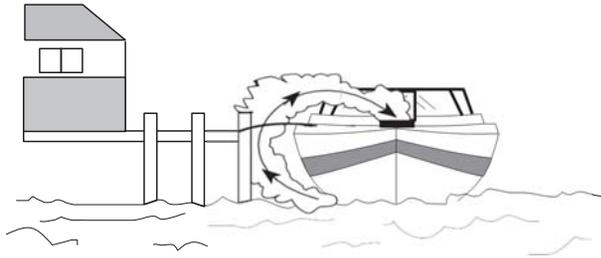

**Figure 2.1 - Running engine or generator in confined areas**

**⚠ DANGER**


**DANGER:** Generator or hull exhaust from other vessels alongside your boat, while docked or anchored, can emit carbon monoxide and cause excessive accumulation within the cabin and cockpit areas. Be alert for generator exhaust from other vessels alongside. (Figure 2.2)

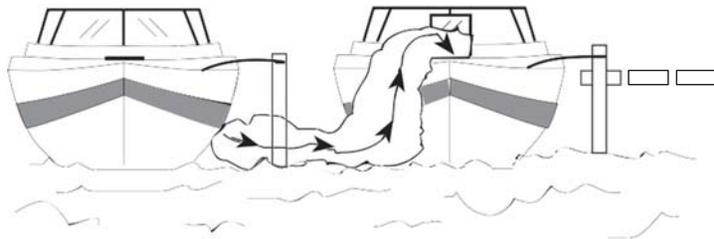

**Figure 2.2 - Exhaust fumes from vessel alongside**


**⚠ DANGER**

**DANGER:** Engine exhaust from your boat while underway can cause excessive accumulation of carbon monoxide within the cabin and cockpit areas when using protective weather coverings. Provide adequate ventilation when the canvas top, side curtains, and/or back curtains are closed. (Figure 2.3)

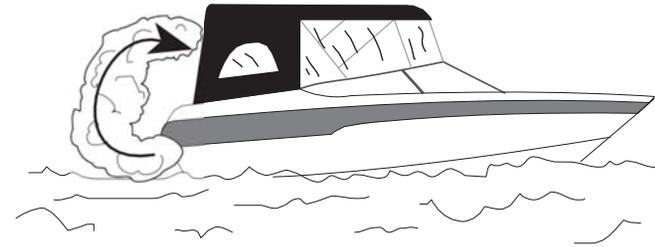

**Figure 2.3 - Exhaust accumulations while canvas is in place**

Ensure proper ventilation aboard your boat and be aware of the possibility of carbon monoxide poisoning (Figure 2.4). Keep your boat in safe operating condition. Periodically inspect the hull, engine and engine compartment, and all other equipment.

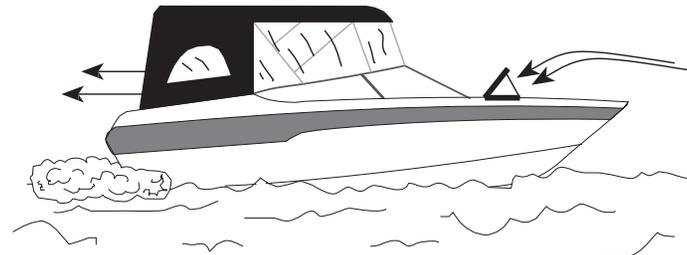

**Figure 2.4 - Desired ventilation through the boat**



## Fuel System

Everyone who owns or operates a boat must practice fire safety. Each year, boat fires and explosions injure hundreds of individuals and cause millions of dollars in property damage. Many of these accidents can be prevented.

Be alert for damage to your boat's fuel system. Over time, fuel fittings and fuel hoses wear out. Inspect these fittings and hoses regularly, especially near the engine where engine heat and vibration can accelerate deterioration.

### What to do

1. Schedule regular engine and exhaust system maintenance inspections by experienced and trained technicians.
2. Inspect fuel systems annually, particularly hoses, connections and tank surfaces. Use only USCG-approved fuel hoses.
3. Before fueling, shut down engines and auxiliary equipment and all electrical equipment. Also close all hatches and doors on board.
4. Do not allow equipment or gear to contact fuel-system components.  
Monitor side storage areas where fill and vent hoses are often located.
5. Do not store portable fuel tanks in enclosed areas, including the engine room compartment (even though it may be "ventilated").
6. Take a boating safety course and learn the correct type and use of a fire extinguisher aboard a boat.

### Each Trip

- Before starting the engine "sniff" your bilges. Getting down on your hand and knees and using your nose is the best fuel/vapor detector.

- Make sure all passengers know where to find your fire extinguishers and how to operate them.
- Before refueling, close all hatches, ports and other openings; shut off engines, motors, pumps and blowers; and DO NOT SMOKE. Fill all portable tanks on the dock.
- After refueling, wipe up or wash off any excess or spilled fuel; open all hatches and ports; and let the boat air out. "Sniff" your bilges.

***Important: Do not operate your boat until the source of a fuel leak is identified. Have a qualified service technician correct the condition. NEVER USE A MATCH TO INSPECT FOR LEAKS.***

### At Least Annually:

(Performed by a qualified marine technician)

- Replace fuel system components if any evidence of cracking, corrosion or deterioration is found.
- Inspect fuel tanks annually. Pay particular attention to bottom surfaces that may have contacted bilge water. Also, check to see if any part of the tank is corroded or damaged from rubbing and abrasion. Permanently installed fuel tanks must be vented to the atmosphere outside the boat. Closed compartments that contain fuel tanks and engines or non-ignition protected electrical components must be ventilated.
- Be sure the fill pipe is securely mounted, grounded and located where spilled fuel is directed overboard. Dry and cracked or soft and mushy fuel fill hoses should be replaced immediately.
- If your boat is equipped with bilge blowers, ensure they are working properly.
- Ensure cooking appliances on board are secured and operate properly. Refer to the appliance owner's manual.
- Ensure flammable items are stowed safely and cannot contact cooking appliances or hot engine parts.
- Ensure fire extinguishers are USCG-approved and in good working order (i.e., gauges register and nozzles are clear).



# 2020 SSI SPORT/SKI & FISH



- Repair all bare wires and loose electrical connections that might cause a short in your boat's electrical system and start a fire.
- Do not store disposable propane cylinders or charcoal lighting fluid on board the boat.
- When replacing starters or other electrical equipment use only ignition-protected parts. Do not use automotive parts.

3. Be sure the skier is wearing a proper flotation device. A properly designed ski vest will keep a stunned or unconscious person afloat.
4. Approach a skier in the water from the lee side, and be certain to stop your motor before coming close to the skier.
5. Give immediate attention to a fallen skier. He or she is vulnerable in the water alone and is difficult to see by other boaters.

## Navigational Aids Chart

The Navigational Aids Chart (located at the end of this section) contains information about various signals, buoys, and warnings. Chaparral recommends you participate in a safe boating course to learn more about navigating your boat safely.

For more information about water skiing, Please contact the American Water Ski Association, 799 Overlook Drive, Winter Haven, Florida 33884 (1-800-533-2972) or [www.usawaterski.org](http://www.usawaterski.org).

## WATER SPORTS

Water skiing and other water sports, such as knee boarding and riding on inflatable towable devices, require increased safety awareness by all the people involved.



**WARNING:** Serious injury may result from para-sailing, kiting, or similar water sports. Chaparral Boats are not designed for towing para-sails, kites, or any other device designed to become airborne when towed behind a boat.

***Important: Remember that three people — not two — are required for safe water skiing: the boat operator, the skier, and an observer on the boat facing the skier. The observer relays signals from the skier to the operator. The operator can therefore give full attention to the operation of the boat and the waters ahead.***

Figure 2.6 shows a set of hand signals recommended by the American Water Ski Association (AWSA). The skier, the observer, and the boat operator should know and understand these 7 simple signals.

Following these guidelines helps make water skiing a safe and enjoyable experience:

1. Water ski only in safe areas away from other boats and swimmers, out of channels, and in water free of underwater obstructions.
2. Make sure anyone who water skis is a competent swimmer.



# 2020 SSI SPORT/SKI & FISH



## Additional Equipment

You should consider having additional equipment on board to help make your boating experience safer and more enjoyable. Some examples include the following:

- Anchor and line
- Boat hook
- Bucket and sponge
- Commonly used spare parts
- Compass, navigation charts
- Distress signal kit
- Docking and towing lines
- Engine and accessory manuals
- Extra keys
- Fenders
- First aid kit
- Flashlight and extra batteries
- Fuses
- Manually operated bilge pump
- Owner's manual
- Paddle
- Replacement light bulbs
- Ship-to-shore radio
- Spare fuel and oil
- Spare propeller with fastening hardware
- Spare set of spark plugs and ignition parts
- Tool kit

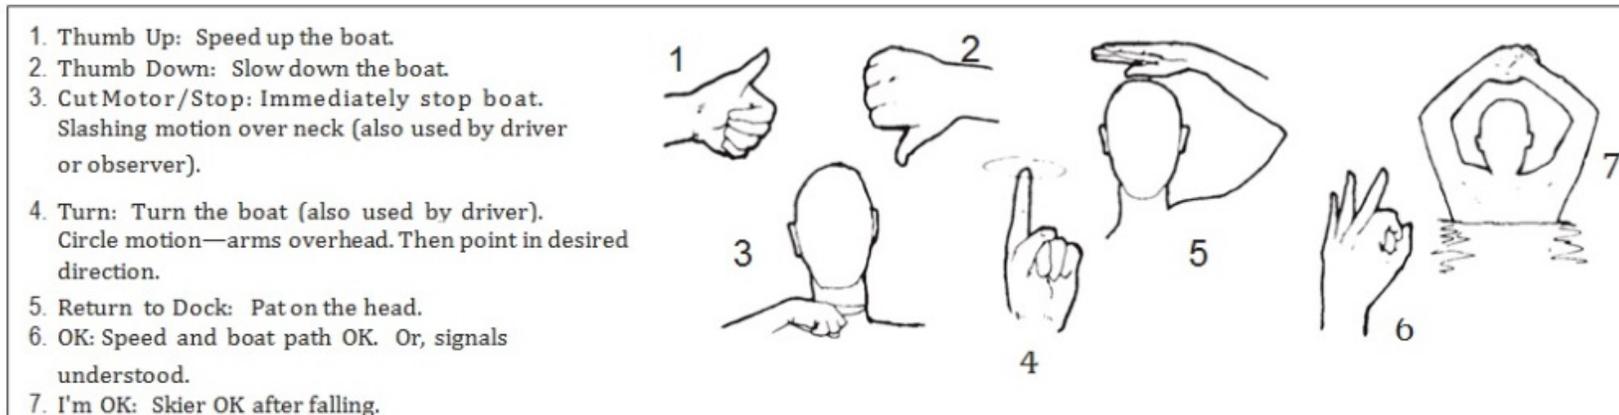


Figure 2.6 AWSA Water Skiing Signals




# 2020 SSI SPORT/SKI & FISH



## NAVIGATIONAL AIDS CHART

### REMEMBER THESE RULES

- OVERTAKING - PASSING:** Boat being passed has the right-of-way. **KEEP CLEAR.**
- MEETING HEAD ON:** Keep to the right.
- CROSSING:** Boat on right has the right-of-way. **Slow down and permit boat to pass.**

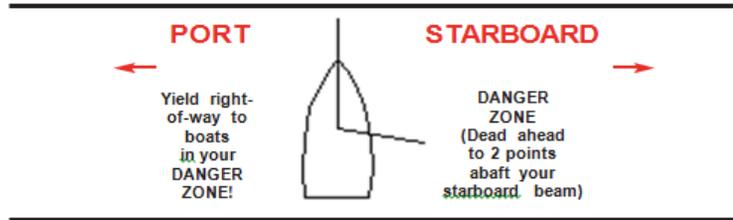

### WHISTLE SIGNALS

- ONE LONG BLAST:** Warning signal (Coming out of slip)
- ONE SHORT BLAST:** Pass on my port side
- TWO SHORT BLASTS:** Pass on my starboard side
- THREE SHORT BLASTS:** Engine(s) in reverse
- FOUR OR MORE BLASTS:** Danger signal

### BRIDGE SIGNALS

SOUND		VISUAL	
		DAY (Flag)	NIGHT (Lights)
VESSEL: Open	— ●	VESSEL: Open	□ ○ ●
BRIDGE: OK	— ●	BRIDGE: OK	Same
No	● ● ● ● ● ● ● ●	No	Same
VESSEL: Replies:	● ● ● ● ● ● ● ●		
RADIO: VHF CH. 13			

### STORM WARNINGS

<b>RED FLAG</b> Small craft (winds to 33 knots)	<b>2 RED FLAGS</b> Gale (winds up to 47 knots)	<b>SQUARE RED FLAG BLACK BOX</b> (Storm)	<b>2 SQUARE RED FLAGS BLACK BOX</b> (Hurricane)

### LATERAL AIDS AS SEEN ENTERING FROM SEAWARD

PORT SIDE ODD NUMBERED AIDS	SAFE WATER MID-CHANNELS OR FAIRWAYS NO NUMBERS-MAY BE LETTERED	STARBOARD SIDE EVEN NUMBERED AIDS
<ul style="list-style-type: none"> <li>GREEN LIGHT ONLY</li> <li>FLASHING</li> <li>OCCLUDING</li> <li>QUICK FLASHING</li> <li>ISOPHASE</li> </ul>	<ul style="list-style-type: none"> <li>WHITE LIGHT ONLY</li> <li>MORSE CODE</li> <li>SPHERICAL</li> <li>MORSE CODE</li> <li>LIGHTED BUOY</li> <li>CAN</li> <li>DAYMARK</li> </ul>	<ul style="list-style-type: none"> <li>RED LIGHT ONLY</li> <li>FLASHING</li> <li>OCCLUDING</li> <li>QUICK FLASHING</li> <li>ISOPHASE</li> <li>LIGHTED BUOY</li> <li>NUN</li> <li>DAYMARK</li> </ul>
<ul style="list-style-type: none"> <li>Lighted Buoy (Green)</li> <li>Can (Green)</li> <li>Daymark (Green with number 1)</li> </ul>	<ul style="list-style-type: none"> <li>Spherical (White)</li> <li>MORSE CODE (White)</li> <li>Lighted Buoy (White)</li> <li>Can (White)</li> <li>Daymark (White with letter 'A')</li> </ul>	<ul style="list-style-type: none"> <li>Lighted Buoy (Red)</li> <li>Nun (Red)</li> <li>Daymark (Red with number 2)</li> </ul>
	<ul style="list-style-type: none"> <li>PREFERRED CHANNEL NO NUMBERS-MAY BE LETTERED COMPOSITE GROUP FLASHING (2+1)</li> </ul>	

<ul style="list-style-type: none"> <li>Lighted Buoy (Green)</li> <li>Can (Green)</li> <li>Daymark (Green with letter 'A')</li> </ul>	<ul style="list-style-type: none"> <li>Lighted Buoy (Red)</li> <li>Nun (Red)</li> <li>Daymark (Red with letter 'B')</li> </ul>
<ul style="list-style-type: none"> <li>PREFERRED CHANNEL TO STARBOARD (UP-MUS) BAND GREEN</li> </ul>	<ul style="list-style-type: none"> <li>PREFERRED CHANNEL TO PORT (DOWN-MUS) BAND RED</li> </ul>

United States Coast Guard Website: [www.uscg.mil](http://www.uscg.mil)



## SYSTEMS

The drawings at the end of this chapter show the typical locations of system equipment.

**NOTE:** For location of items listed in this chapter, refer to the respective drawing. Depending on how your boat is equipped, the location of some items may be different than shown in the illustration.

### Electrical Systems

Your Chaparral boat has a 12 volt, direct current (DC) battery system.

#### **Safety Precautions**

Follow these precautions when working with or on electrical systems or electrically powered equipment:

1. Shut off power supply before starting work.
2. Use insulated mats to prevent accidental grounding.
3. Make sure clothing is dry. Keep skin dry.
4. Remove all metal jewelry.

#### **12 Volt DC Power**

Batteries are the source of power for the 12 volt DC (direct current) electrical system. The batteries are charged through the engine-driven alternator. The voltmeter on the instrument panel in the dash shows the battery charging rate when the engine is running.

The negative terminal of each battery is connected to the grounding studs of the main engine(s). This type of negative ground system is the approved system for marine DC electrical systems. If you add additional equipment to your boat it must be adaptable to the negative ground system.

**NOTE:** A fuse block near the helm has been provided with additional accessory hookups. Consult your Chaparral dealer for additional DC power needs on your boat.

**Note:** The appropriate fuse or circuit breaker must be used. Consult a qualified technician for proper fuse size.



**CAUTION:** When adding electrical equipment, be careful not to overload the fuse block.



**WARNING:** Considerable care has been taken to design a safe electrical system to protect you from hazardous shocks. Always have a qualified technician make any modifications to the system.



**DANGER:** Do Not disconnect or reconnect battery cables if gasoline fumes are present!



# 2020 SSI SPORT/SKI & FISH



## Battery

**Note: A dual battery system is optional equipment on this model.**

The battery installed in your boat by your Chaparral dealer supplies your boat with DC current for lights, engine starting, and accessories. When the engine is running, the alternator supplies the power needed to keep the batteries charged. Lights and accessories draw power from the batteries.

**Note: If engine is off and you are using boat accessories, you need to start your engine occasionally to allow engine alternator to fully recharge battery. Otherwise you may drain battery and you will not have enough power to start engine.**

## Battery Selector Switch

Some models have a battery selector switch as optional equipment. If your boat has a battery selector switch, you will find it in the engine compartment or stern area of the boat. Leave switch on while motor is running or damage will occur to the alternator.

## On/Off Switch with One Battery

On – Power supplied to entire boat

Off – Power supplied to automatic bilge pump and stereo memory.

To start engine, place switch to ON position. Power is now supplied to your boat from the battery. Then start engine. Leave switch in this position to fully recharge battery.

**Note: If engine is off and you are using boat accessories, you need to start your engine occasionally to allow engine alternator to fully recharge battery. Otherwise you may drain battery and you will not have enough power to start engine.**

## General Electrical System Information

Electrical panel and shore power inlet wire connections may possibly loosen over time. Chaparral recommends having your dealer check these connections at least annually, or if you are having any electrical system problem. Due to potential electrical shock hazard, do not attempt this service procedure yourself. Your dealer is trained to properly diagnose and correct electrical problems safely.

## Lighting

Lighting operates off the 12 volt DC system. Turn lights on or off at the main electrical panel in the cabin or at the light fixture. See your Chaparral dealer for information regarding bulb replacement.

## Fuel System



The internal fuel system on your Chaparral boat meets all current Federal requirements.

Fuel lines, filters, and all fuel system components should be checked at the start of each season and periodically thereafter, particularly after any work has been done aboard the boat which might have affected any part of the system. Be certain that all are in proper condition and that the entire system is fuel tight.

The fuel tank is located under the cockpit floor. The fuel tank fill pipe is located on the outside deck. Some models have a dual fuel system, providing convenience and flexibility of refilling your tank from either



# 2020 SSI SPORT/SKI & FISH



The fuel tank vent allows air to escape as the tank is being filled and helps equalize tank pressure as temperatures change. The tank has an anti-siphon valve which keeps fuel from leaking into the boat in case of fuel line breaks.

Periodically, check the condition of the fuel tank components. Fuel tank fittings are accessible through the inspection plate of the cockpit floor.

## Fuel Recommendations

The quality of the fuel is very important for satisfactory engine performance and long engine life. Fuel should be clean and free of contamination. Your fuel tanks should be kept full of fuel whenever possible. This will reduce the amount of water condensation and reduce the possibility of contamination. Chaparral recommends not using fuel containing more than 10% alcohol by volume.


Ethanol-infused gasoline is widely available to today's boater. However, it may have harmful effects on marine engines and fuel delivery systems. Please refer to your engine manufacturer's owner's manual to find the recommended type and grade of fuel for your engine as well as a better understanding of the effects of ethanol on your engine.



## Freshwater System (If equipped)

Chaparral SSI models have a pressurized water system. The fresh water system provides water from an onboard storage tank. A water pump and filter provide water under pressure to the optional transom and bow shower and the sink in the cockpit galley.

The fresh water tank is filled through the fill plate on the side of the deck. The vent allows air to enter and escape as water levels change. Fill the tank only with potable water. Using and refilling the tank frequently keeps drinking water fresh and clean.

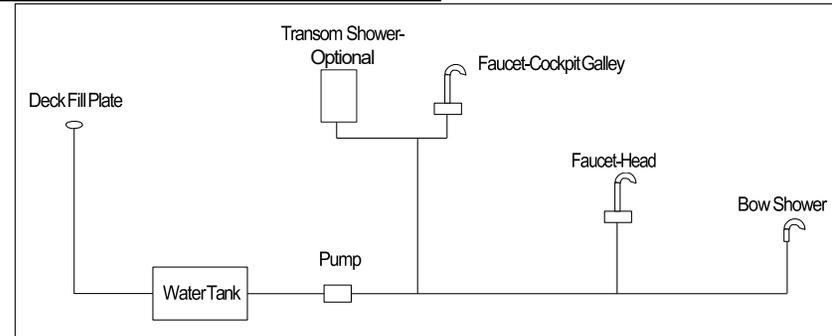

**Pressure Water System**

## Transom Shower

Nothing is more luxurious than being able to rinse yourself off with fresh water after swimming or water skiing in salt water. An optional transom shower is located at the transom and bow through the use of pressurized water. Most showers have a push button shower head. Pressurized water switch is located at helm.

## Sanitizing the Fresh Water System

Sanitize the fresh water system before you use it the first time, when you recommission your boat after winter storage, or when the system has not been in use for an extended period of time.

**Note: Fresh water tank must be empty before beginning sanitizing process. Empty tank, if necessary.**



**CAUTION:** Bleach causes eye and skin irritation. Notify all persons on board the fresh water system is being sanitized. Do not allow anyone to drink water from fresh water system while it is being sanitized. In case of body contact, follow directions on bleach container.



## To Sanitize the Tank

1. Pour 10 ounces of household bleach for every 10 gallons of capacity into the water tank.
2. Fill the water tank with clean fresh water.
3. Manually pump water throughout the system.
4. When a steady stream of water is coming from the faucet, all air is out of the system. Turn switch OFF after closing faucets.
5. Allow treated water solution to remain in tank for 3 to 4 hours.
6. Turn on water pump switch and pump all treated water solution from tank and lines through all faucets.
7. Refill tank with fresh water and turn on pump to thoroughly flush entire system with fresh water after each sanitizing.

**Note: If fresh water tastes like chlorine after sanitizing, pour a solution of 1 quart vinegar and 5 gallons of fresh water into the tank and allow solution to stand in tank for several days. Then drain entire system and flush with fresh water. Fill tank with fresh water.**

## Initial Start-Up

1. Fill fresh water system.
2. Manually pump water faucet until water is coming out of the faucet or if optional pressure water system, turn on water pump breaker.
3. Open galley faucet to allow air to escape.
4. Close faucet when steady flow of water appears.

## Optional Water Pump and Filter

Once the pressurized water pump switch is ON, the water pump supplies water under pressure to the fresh water system. The filter keeps particles from entering the pump reservoir. Check the filter periodically and clean if necessary. A clogged filter may result in low water pressure to the system.

Before servicing the filter, turn the water system breaker OFF and release pressure on the system by opening all faucets. To clean the filter, remove screen and rinse with clean water. Replace and make sure the O-ring is seated properly when installing the cover.

**Note: Refer to the water pump manual for detailed operation and maintenance procedures.**

## Marine Sanitation Devices



**WARNING: Explosion Hazard! Waste in holding tank can form methane, an explosive gas. Keep vent open and clear of obstructions. Keep fire and flame away when maintaining sanitation devices.**


Standard and optional sanitation equipment varies with the boat model. These options include a pump-out Porta-Potti (Figure 3.1), or an Electric Toilet system with holding tank and optional overboard discharge (Figure 3.2).

The marine sanitation device (MSD), or head, installed on your Chaparral boat stores the waste in an onboard holding tank. The preferred method to empty the tank is by using a dockside pump out station designed for sanitary removal of the waste. The only time you will use the overboard discharge pump is when you empty the holding tank.


**Note: See the owner's manual supplied by the manufacturer for safety precautions and for detailed operation, maintenance, and winterizing procedures. The manual is in your owner's packet.**

The U.S. Coast Guard has also issued regulations requiring boats to have a sanitation system on board to control pollution. Wastes are to be stored in a holding tank or other device, such as a Porta-Potti, until the device can be pumped out and disposed of at a shore facility. Discharging this waste overboard is prohibited in most jurisdictions. Check with the Coast Guard regarding regulations in your area.

If your boat is equipped with the VacuFlush® head, your waste system is actuated by a HEAD or TOILET SYSTEM switch in the head. It uses fresh water to minimize odor problems. To add water to the bowl, raise flush lever until desired water level is reached. Add deodorizer before using the head. The pedal at the base of the head evacuates waste and a vacuum forces the waste to the holding tank.

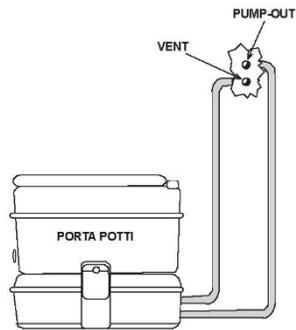

**Figure 3.1 Pumpout Porta-Potti**

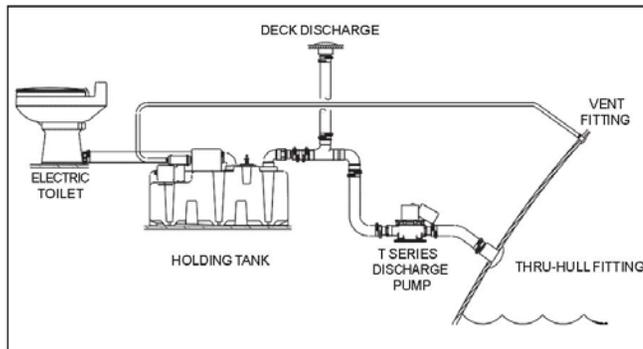

**Figure 3.2 VacuFlush**

To flush, press flush lever sharply to floor until contents clear bowl. A sharp popping noise is normal when the vacuum seal is broken. Hold flush lever down for three seconds. If flush lever is accidentally released before waste clears bowl, do not attempt to flush toilet again until vacuum pumps stops running. A small amount of water should remain in the bowl for flushing. Do not dispose of sanitary napkins or other insoluble items in toilet. Do not leave VacuFlush® power on for extended periods when away from the boat as this can cause damaging over cycling if the bowl is not sealed.

Make sure all guests understand the operation of the VacuFlush® system and that the instruction label is easy to read and in plain sight.

Refer to your VacuFlush® manual for complete information about the operation of the system.

## Overboard Discharge

**Important: Overboard discharge of untreated sewage within 12 miles of shore on the east coast and within 9 miles of shore on the west coast is prohibited by law. Check with the local authorities for proper discharge procedures in your area. If your boat is going to be used on inland waters, have your dealer seal the overboard discharge portion of your waste system.**

If regulations permit, the macerator can be used to pump waste from the holding tank overboard. The MACERATOR circuit breaker at the battery selector switch panel protects the power supply to the macerator. The macerator pulls the waste from the holding tank, grinds the waste into small particles, and pumps the waste overboard through a hull discharge fitting above/below the water line.

Follow these procedures to operate the Overboard Discharge Pump:

1. Switch on the MACERATOR switch in the head compartment.
2. Allow the macerator to run until the holding tank is empty, but not longer. **Running the macerator when the tank is empty will cause damage to the pump.**
3. When you hear the pump speed up (indicates tank is empty), immediately turn the switch off.

**Note: If the Overboard Discharge Pump won't turn on, check the circuit breaker at the battery switch panel. If resetting the breaker doesn't allow the Overboard Discharge Pump to turn on, see your dealer to determine the cause of the problem.**



# 2020 SSI SPORT/SKI & FISH



### Typical Engine Compartment Layout



- 1 - BILGE PUMP
- 2 - ENGINE (VOLVO)
- 3 - BLOWER
- 4 - TRIM PUMP (VOLVO)
- 5 - BATTERY
- 6 - FIRE PORT
- 7 - FUEL TANK
- 8 - BATTERY SWITCH
- 9 - FIRE EXTINGUISHER

### Plan View




- A - Strong Points for Anchoring or Docking
- B - Sling Locations
- C - Trawling Eye

### 19 SSI Sport and Ski & Fish



# 2020 SSI SPORT/SKI & FISH

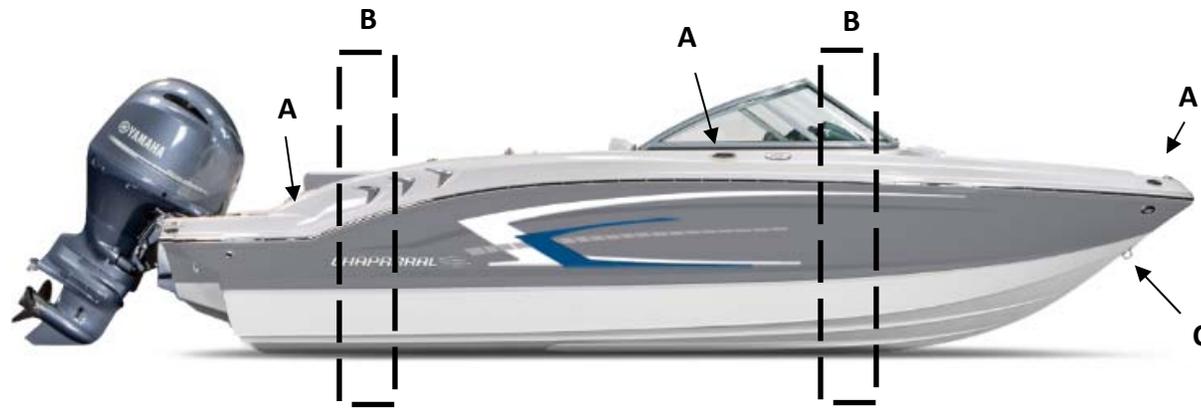

- A - Strong points for Anchoring or Docking
- B - Sling Locations
- C - Trailing Eye



- 1. Gas Tank
- 2. Batteries
- 3. Bilge Pump
- 4. Diurnal Canister
- 5. High Water Float
- 6. Battery Selector Switch
- 7. Battery charger

**19SSI0B**  
Sport and Ski & Fish



# 2020 SSI SPORT/SKI & FISH



## Typical Engine Compartment Layout



- 1 - BILGE PUMP
- 2 - ENGINE (VOLVO)
- 3 - BLOWER
- 4 - TRIM PUMP (VOLVO)
- 5 - BATTERY
- 6 - FIRE PORT
- 7 - FUEL TANK
- 8 - BATTERY SWITCH
- 9 - FIRE EXTINGUISHER

## Plan View



- A - Strong Points for Anchoring or Docking
- B - Sling Locations
- C - Trawling Eye

SSI 21  
Sport and Ski & Fish



# 2020 SSI SPORT/SKI & FISH



A - Strong Points for Anchoring or Docking  
B - Sling Locations  
C - Trailing Eye



- 1. Bilge Pump
- 2. Battery Tray
- 3. Fuel Tank

OB21SSI  
Sport and Ski & Fish



# 2020 SSI SPORT/SKI & FISH



- 1. Fire Extinguishing System
- 2. Engine
- 3. Trim Pump
- 4. Battery Location
- 5. CE Option - Manual Pump
- 6. Blower
- 7. Bilge Pump
- 8. Fuel Tank
- 9. Steering System


- A - Strong points for anchoring or docking
- B - Sling locations
- C - Trailering eye



24 SSI



# 2020 SSI SPORT/SKI & FISH

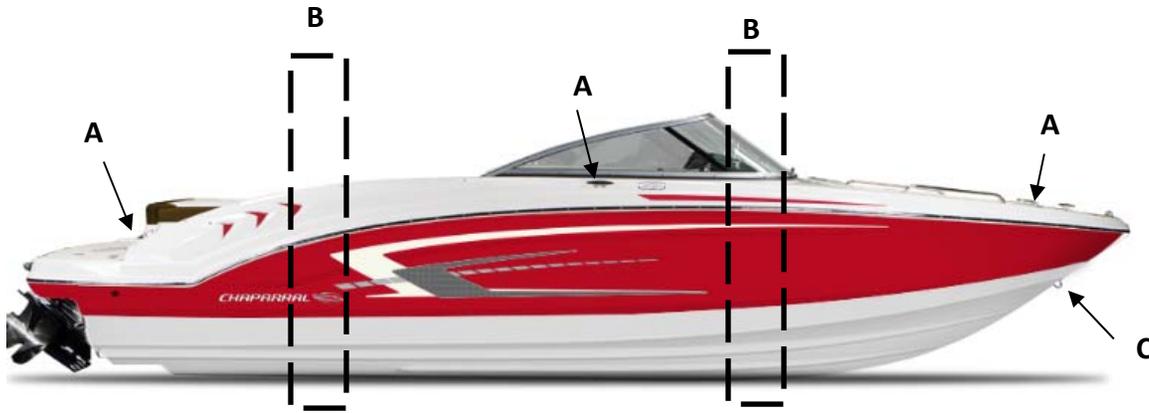

- A – Strong points for anchoring or docking
- B – Sling locations
- C- Trailering eye




- 1. Gas Tank
- 2. Batteries
- 3. Bilge Pump
- 4. Diurnal Canister
- 5. High Water Float
- 6. Battery Selector Switch

23 SSI Sport



# 2020 SSI SPORT/SKI & FISH

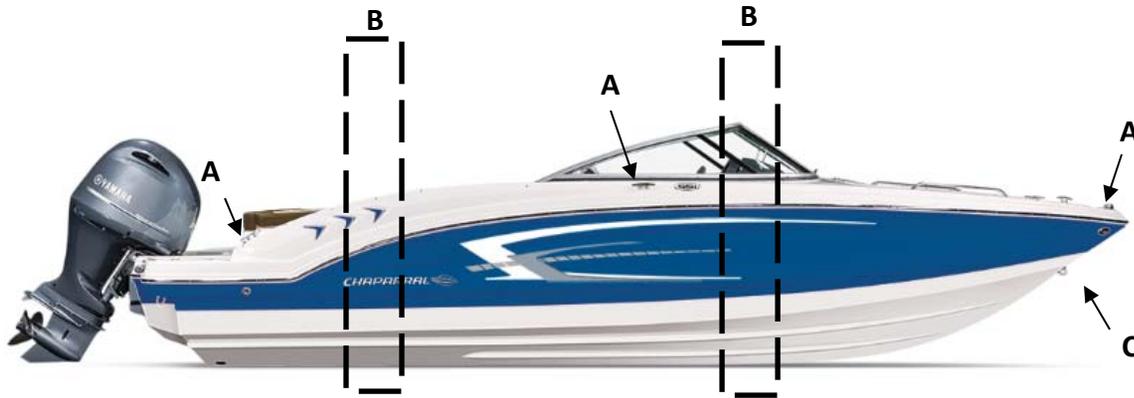

- A – Strong points for anchoring or docking
- B – Sling locations
- C – Trailering eye



- 1. Gas Tank
- 2. Batteries
- 3. Bilge Pump
- 4. Diurnal Canister

OB23SSI



## COMPONENTS

This chapter describes standard and optional components factory installed on our pleasure boats. Depending on how your boat is equipped, it may or may not have all of the equipment described in this chapter.

Be sure to read all operation, maintenance, and safety information contained in each component's manual before operation. The manuals are in your owner's packet.

**Important: Adhere to all safety precautions in the manufacturer's literature when operating the components.**



**WARNING:** When using electrical components, observe safety precautions to reduce the risk of fire, electrical shock, personal injury or damage to your boat and/or component.

### Dashboard and Instrument Panel



**WARNING:** Your boat may be equipped with digital instrumentation. Electrical system troubleshooting and/or adding of electrical equipment to your boat should only be performed by a Chaparral Dealer to prevent damage to this electrical system.

Instruments on the dashboard are important for monitoring the performance of your boat and alerting you to possible problems or causes of problems.

The **tachometer** indicates the operating speed of the engine in revolutions per minute (RPM). It does not indicate the speed of your boat moving through the water. Do not exceed the maximum full throttle RPMs stated in the engine operator's manual.

The **fuel gauge** indicates the approximate amount of fuel in your fuel tank. The reading is most accurate when your boat is operating at idle speed. Be aware that you should compare gauge readings with hours of use versus known fuel consumption because the gauge is only an approximate reading of the amount of fuel in your boat's tank.

The **speedometer** indicates the speed your boat is crossing the water in miles per hour. Water pressure from a water pickup at the boat's stern is measured and converted into a reading on the speedometer.

### **4-in-1 Multifunction Gauge**

The multifunction gauge contains four gauges into one. This includes engine oil pressure, battery voltage, engine water temperature and trim.

The **voltmeter** indicates battery voltage. When the engine is running, the meter should read between 12 and 15 volts. A significantly lower reading may indicate a battery or alternator problem or a heavy drain on the battery. If the voltmeter needle moves back and forth in wide swings, the alternator may not be charging properly.

The **oil pressure gauge** is an accurate indicator about what is going on inside your boat's engine. Any serious problem with your engine will likely be indicated on this gauge. Check the reading when the engine is new, and use it as the reference point during the life of your engine. Also, check with your Chaparral dealer for the normal pressure reading for your boat's engine.



The **water temperature gauge** indicates the temperature of the cooling water circulating inside your engine. A thermostat keeps the temperature of the water at a preset temperature. If the temperature raises or continues to rise above normal, shut down your engine and determine the cause of the high temperature.

The **trim gauge** indicates the angles of the engine outdrive. This gauge will assist in the planning and overall performance of your boat.

The optional **depth finder** measures the depth of the water from the bottom of your boat. See the manufacturer's instruction manual for details about proper operation and maintenance.

## **Hydraulic Steering System (Outboard Models Only)**

Your boat has a hydraulic steering system. This system has two basic elements: helm pump and cylinder. The steering wheel is mounted to the shaft of the helm pump. Turning the steering wheel pumps hydraulic fluid to the steering cylinder. Extra hydraulic fluid prevents air from entering the system. A relief valve protects both the mechanical portion of the rudder (in case the rudder strikes a hard object) and the hydraulic system. This is a manual system, not a power steering system. The effort required to turn the wheel will increase as the system is called on to exert more force on the engines. At no time, should anyone expect this system to turn as easily as a car's power steering.

Check the level of hydraulic fluid in the helm regularly and replenish, if necessary. All other maintenance should be performed by your dealer.

## **Power Steering Unit**

Your boat may have an optional or standard power steering unit for the hydraulic steering system. This unit is powered off of one engine only. If you lose power to the power steering system due to an engine or electrical issue, you will still maintain your normal hydraulic steering system

## **Steering**

Other than the common sense and good judgment of the operator, the steering system is the most important safety system on your boat. Factors requiring operator attention for safe steering include engine torque, trim tabs settings, waves and speed.

Power steering provides positive steering control while providing the operator with the steering sensitivity and "feel" needed for good steering control. An enclosed cable system connects the steering wheel to the stern drive. Check cables regularly and tighten them as needed.

**Note: Your boat has a mechanical steering system. Refer to the steering manufacturer's owner's manual found in your Owner's Packet, for detailed information regarding use, care and maintenance of the steering system.**

**Note: Refer to the engine manufacturer's information found in your Owner's Packet for use, care and maintenance instructions for power steering units installed on their motors.**

## **Throttle**

The throttle controls the boat's speed and the direction the boat travels. If the throttle is in its center neutral position, the boat will not move forward or aft with the engine running. Moving the throttle forward from center moves the boat forward. Moving the throttle aft moves the boat backward. The speed at which the boat moves is directly related to how far the operator pushes the throttle.

**Note: The throttle must be in its center neutral position before the engine will start. See your engine manufacturer's owner's manual for specific starting instructions.**



## **Power Trim**

The power trim system allows the operator to raise and lower the stern drive to adjust the drive angle while underway. It also allows the operator to raise and lower the drive for trailering, beaching, and operation in shallow water. Control your trim setting with the trim switch on the control handle. Section 5 discusses the importance of proper trim while operating your boat.

**Note: Drive must be in untrimmed position to start engine.**

**Refer to your engine manufacturer's owner's manual for information concerning maintenance and operation.**

## **Fire Extinguishers**

As the boat owner, you are responsible for making sure you have the required number of fire Extinguishers. Fire Extinguishers must be approved by the U.S. Coast Guard.

Boats longer than 26 feet and shorter than 40 feet: Two Type B-1 or at least one Type B-2 portable hand Extinguishers. If your boat has a fixed fire extinguishing system approved by the U.S. Coast Guard, one Type B-11 extinguisher is required.

Boats longer than 16 feet and shorter than 26 feet: At least one portable hand Type B-1 fire extinguisher.

All fire Extinguishers should be mounted in a readily accessible location away from the engine compartment. Everyone on board should know where the fire Extinguishers are and how to operate them.

If your fire extinguisher has a charge indicator gauge, cold or hot weather may affect the gauge reading. Consult the instruction manual supplied with the fire extinguisher to determine the accuracy of the gauge.

## **Automatic Fire Extinguisher**


**Note: A fire extinguishing system is available as optional equipment on some models.**

The fire extinguishing system in the engine compartment uses a fire extinguishing agent. In case of fire, the heat-sensitive automatic nozzle releases agent as a vapor, totally filling the area with agent to extinguish the fire.

The system's indicator light at the helm is illuminated when the ignition switch is on. When the system is discharged, the indicator light will go out.

Allow agent to fill entire engine compartment for at least 15 minutes. Hot metals or fuel can also begin cooling during this time. Cautiously inspect compartment for cause of fire and damage to equipment. Have portable Extinguishers readily available. Do not breathe fumes or vapors caused by fire.

Note: See the manufacturer's owner's manual for detailed information about safety precautions and procedures for operating and maintaining the fire extinguishing system. The manual is in your owner's packet.

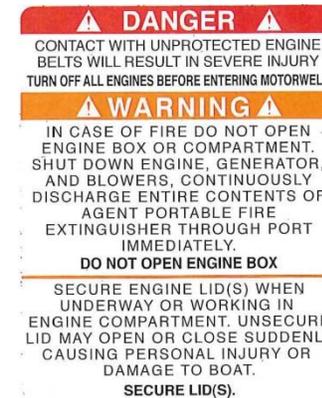



## **Bilge Pump**

**Note: All models come equipped with an automatic bilge pump that will activate when water accumulates in the bilge. There is also a switch at the helm for manual activation.**

The electric bilge pump removes water from the bilge area. If the pump motor runs but does not remove any water, the pump may be clogged. If there is no visible debris clogging the pump and water is still not being removed, check the discharge hose for kinks or obstruction.

**Note: The Federal Water Pollution Act prohibits the discharge of oil or oily waste into or upon the navigable waters and contiguous zones of the United States if such discharge causes a film or sheen upon, or discoloration of, the surface of the water, or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty.**

## **Bilge Blower**

The bilge blower, controlled by a switch at the helm, evacuates fumes out of the engine compartment while bringing fresh air in through the deck vents. Make sure all fumes are evacuated from the engine compartment prior to starting the engine. The bilge blower must be running before and when you start the engine and while operating your boat below cruising speed.

## **Running and Navigation Lights**

If you operate your boat at night, the law requires you to turn your boat's running lights ON. Your Chaparral boat has one white, one red (port), and one green (starboard) light. Check running lights periodically for proper operation. Check them before heading out after dusk.

There are various running light combinations for the types of vessels you may encounter while boating. You should learn to identify what these combinations are and the type of vessel they are associated with.

Chaparral recommends participation in a "safe boating" course to learn more about the various light combinations.

The running/navigation lights are controlled at the helm station by a three position rocker switch. This allows for selection of the mast (white) light ON when anchored or moored, or to have the mast (white), port (red) and starboard (green) lights all ON while underway.

## **Docking Lights**

Docking lights are available on the SSI models. Halogen docking lights are used for safe night time docking, and are glare-free. If your boat is equipped, they are powered by a switch at the helm.

## **Stereo Sound System**

The stereo in your boat is equipped with an AM/FM radio, MP3 Jack, and premium water resistant speakers. Our sound systems are Sirius Satellite Ready. The stereo will turn off when motor is cranked. This is normal operation. The stereo memory has power at all times.

Some models are equipped with stereo speaker upgrades with amps, subwoofers, and/or tower speakers on select models.

Some models are equipped with a stereo remote located at the dash for operator's convenience. Some models are equipped with a stereo remote located at the transom and available as optional equipment on other models.

**Note: It is the boat owner's responsibility to manage battery voltage while using this feature to ensure battery/batteries are not drained to a point where engine will not start.**

Refer to owner's packet for instructions and warranty information.



## **Wakeboard and Tower Holders**

Wakeboard tower and holders are standard on some models and optional on other models. If equipped, the tower provides a raised attach point (ski tow pylon) for the ski rope, rated at a 600 lbs maximum. The high attach point enables the skier to perform a wide variety of skills not capable with the lower transom attach point.

Some models are equipped with wakeboard tower speakers with amplifiers. It is the boat owner's responsibility to manage battery voltage while using this feature to ensure battery/batteries are not drained to a point where engine will not start.

Chaparral recommends that bimini tops be removed and stored when towing boats equipped with wakeboard towers.

The folded position of the wakeboard tower is for storage only. To prevent damage, do not tow boat with wakeboard tower in the folded position. When towing boat on a trailer, Chaparral recommends that the tower stays in the upright installed position to avoid damage to boat. When folding or raising tower, take care not to pinch electrical wiring.

***Important: Wakeboard holders extend out beyond the gunwale. Use care when towing, at dock or near other boats to avoid damage.***

**Note: Anytime while towing someone behind your boat, they should have their Personal Flotation Device (PFD) on and a third party on the boat to supervise at all times.**

**Refer to owner's packet for instructions and warranty information.**



**WARNING: DO NOT USE ARCH TOWER FOR PULLING INFLATABLES.** Use arch with ski tow for single skier/wakeboarder only. Use ski tow or stern eyes on transom for all other tow behind sports. Heavy loads could collapse tower causing personal injury.



## WARNING

This wakeboard tower should be used for towing wakeboard and ski devices only. Improper use may overstress the wakeboard tower, imbalance the boat, or allow the tow rope to contact passengers. When using the tower, watch for low bridges, overhanging tree limbs or power lines that may come in contact with the tower. Do not use this tower for towing parasails, kites, or other watercraft. Do not tow more than one person at a time from this tow tower. Do not allow passengers to sit behind the rope attachment point when the tower is in use. Do not climb on, hang on, sit on top, jump or dive off this tower at any time. Check to be certain all bolts are in place and that they are tight before using the tower. Failure to adhere to these guidelines may cause personal injury or death.

PN#: XTM001

### **WARNING**

USE CAUTION WITH SKIER IN TOW  
AS TOW ROPE MAY BACKLASH INTO  
COCKPIT WHEN RELEASED

### **NOTICE**

When towing a boat on a trailer, Chaparral recommends that the tower stays in the upright installed position to avoid damage to the boat.



## UNDERWAY

This chapter discusses the operation of your boat from the beginning of a boating excursion to its end. We'd like to remind you to be kind to our environment while you're boating. Don't throw garbage and other refuse overboard. And do your best to keep harmful compounds like gasoline and antifreeze out of the water.



### **Transporting your Boat**

A correctly selected trailer supports your boat properly, makes towing safer, and makes unloading and loading in varying weather conditions easier.

***Important: Improper trailering is one of the major causes for damage to the hull. The warranty does not cover damage of this type.***

**NOTE: Ensure all snap-in carpet has been rolled up and secured prior to moving to prevent carpet damage.**

The type and size of the side supports, or pads, are very important. Side supports run lengthwise to the boat and parallel to the keel. Side supports should only be tight enough to keep the boat from leaning side to side. Any unnecessary pressure will damage the hull. Newer trailers have self-adjusting side supports and a bow pad that can be easily adjusted. These eliminate the need for manually adjusting side supports and keel rollers every time you load your boat. Your Chaparral dealer can help you select the best trailer for your boat.

Inspect your trailer regularly to make sure the side supports are in good working condition. Check bolts securing rollers and supports from time to time to make sure they are tight.

The trailer should be designed and built to carry the full weight of your boat, engine, and gear while providing support for the hull. Be sure not to overload your trailer by loading the boat with excess baggage, camping equipment, etc. Check the certification label on the frame of the trailer. It is required to show the gross vehicle weight rating. Be sure the total weight of your boat, engine, fuel, gear, and trailer does not exceed this rating. Make sure your towing vehicle has a hitch appropriate for the rating. Distributing the weight on the trailer is important.



# 2020 SSI SPORT/SKI & FISH



Place the heaviest items at the bottom of the boat over a roller or chock, and secure them to keep them from shifting.

Balancing the load on the trailer is also important. If too much weight rests on the hitch, the towing vehicle will over steer, a condition that causes the front end of the vehicle to sway. Conversely, too little weight on the hitch causes the trailer to fishtail. In both cases, the vehicle will be difficult to handle and at higher speeds the swaying or fishtailing can become uncontrollable and result in personal injury and damage to the boat, trailer, or towing vehicle.

Weight on the hitch, or tongue weight, should be 5% to 10% of the total weight of the loaded trailer to avoid overloading the tow vehicle and to provide adequate pressure on the hitch ball. If the weight of the loaded trailer is 2000 pounds, the weight on the tongue should be between 100 and 200 pounds. A weight distributing hitch transfers portions of tongue weight to a point between the front and rear wheels of the towing vehicle and to the trailer wheels.

***Important: Bumper hitches are not safe and are illegal in many states.***

**DISCLAIMER:**

***TOWING REGULATIONS REGARDING GROSS VEHICLE WEIGHT RATINGS VARY BY STATE AS WELL AS REQUIREMENTS FOR BRAKES. CHECK YOUR STATE REGULATIONS TO DETERMINE THE BRAKE REQUIREMENTS FOR YOUR BOAT, MOTOR AND TRAILER PACKAGE.***

***CHAPARRAL ASSUMES NO LIABILITY FOR THE TRAILER REQUIREMENTS SPECIFIC TO YOUR STATE.***

The brake system is usually completely self-contained on the trailer and no hook-up is required to the towing vehicle. Brakes are either drum or disc type. They work the same way as the brakes on a standard passenger vehicle, but the method of applying the brakes is different. Your Chaparral or trailer dealer can explain how the brakes on your trailer work.

Make sure your boat is secure before towing it.



**WARNING:** Improper towing can result in an accident causing personal injury and equipment damage. Become familiar with towing instructions in owner's manual and with warnings supplied with your trailer and towing vehicle. Ensure all snap-in carpet is stowed during trailering to avoid damage to carpets.

- Close all windows, hatches, and doors.
- Store equipment to keep it from shifting or falling.
- Remove and store convertible top if your boat is so equipped.
- Use a second safety chain to secure your boat's bow to the trailer tongue. Tie down the stern to the trailer.

Towing a boat requires extra caution by the vehicle's driver. Allow extra distance between vehicles. Obey speed limits. Some states have lower speed limits for vehicles with trailers. If you are traveling slower than other traffic, pull over when it is safe to do so and allow traffic to pass. As with all other aspects of owning and operating your boat, use common sense and good judgment.

If you do not have experience backing a trailer, practice before you get into a confined public or private launch site. Take your trailer to an open area and get accustomed to using it. If possible, take someone with you who knows how to back a trailer.



Steering a trailer while backing it up works the opposite of steering a car. If the trailer needs to go to the right, turn the steering wheel to the left and vice versa. Inexperienced backers tend to turn the wheel too far. Do not over steer. Turn the wheel gradually until you get the feel of safe backing.

## **Launching and Loading**

The handling of your boat and trailer at the ramp requires practice, skill and patience. With care and attention to the following tips, you can launch and relaunch your boat with relative ease.

***Important: Typically a beam of 8 feet 6 inches allows you to tow without a special permit in most places. These boats are considered "trailerable" for this reason. Other boats have wider beams and are still "trailerable," but, in most cases you need a permit to do so. Check with your state on permit requirements before towing.***

## **Roller Trailers – Launching and Loading**

Chaparral recommends you follow the trailer manufacturer's guidelines for launching and loading your boat.



**WARNING:** If the winch handle slips out of your hand, let it spin. DO NOT try to stop it

## **Bunk or Custom Trailers – Launching**

Here are some tips to remember when you are putting your Chaparral boat in the water:

***Important: Before launching your boat, make sure the transom drain plug is installed. If it is not installed, the bilge could fill with water quickly.***

1. Always prepare the boat for launching before you get to the ramp. Stop in a launching prep area near the ramp that doesn't block traffic and remove your tie-downs, tilt up your engine or drive unit, replace your transom drain plugs, etc.
2. Have someone at the ramp to give you directions. Slowly back the trailer down the ramp to the water. If there isn't a ramp available, use a solid area of ground to the shore, with a slope if possible. Avoid wet, soft sand. Always remember to launch your boat at a right angle to the shore.
3. Back the trailer down the ramp until there is enough water to make the boat float. Because the bunks generate more friction than rollers, you need to back the trailer further into the water.
4. Tie a mooring line to the boat so you will have control once it is floating.
5. Unfasten the boat bow safety chain. Hold the winch handle securely, reverse the winch lock and begin unwinding the line. Unwind it slowly and carefully.
6. On an average grade, the bunks on your trailer will allow your boat to gently slip back and float into the water. If your boat doesn't immediately move, try unwinding about six inches of line, lock your winch and give the boat a push. Then unlock the winch and try again. If this doesn't work, you might try backing the trailer deeper, if possible.
7. Care should be given when launching from trailers with bunks that are equipped with plastic-like materials. These materials make the bunk surfaces very slippery, and the boat may begin to unload as soon as tension is released on the winch cable/strap.



## **Bunk or Custom Trailers – Loading**

When loading, always prepare for the procedure prior to reaching the ramp. If the ramp is busy, preparation will shorten the time it takes for you to get your boat out of the water.

You probably won't have to back the trailer into the water as far to load the boat as you did to launch it. In fact, the easiest way is to back your trailer up until the rear of the bunks are in the water. By not putting your trailer too deep in the water, your boat will actually center itself on the bunks about 1/3 to 1/2 the distance onto the trailer.

Connect the winch cable/strap to the bow eye of the boat. Lock your winch before attempting to wind the cable/strap in. Once your boat is aligned and is pulled firmly against the winch stand roller or Vee block and

your winch is in the locked position, connect the boat bow safety chain and you are ready to drive to the loading/preparation area near the ramp to connect all other tie-downs, lighting or electric brake connections, etc.

## **Correction Procedures**

Re-measure all roller assemblies that set in a line across from each other. Make sure the distance to each roller from the centerline of the trailer is equal. In other words, the left side of your trailer should be exactly the same as the right side. This is true of bunk or roller trailers.

If your boat keeps going to the port (left) side, remove the boat and loosen the U-bolts and/or the through bolts that clamp the roller assemblies on the stern (back) section of the trailer. Force each assembly to the right as if you were trying to turn the handlebars of a bicycle. Hold each assembly in this turned position and retighten the U-bolts and/or through bolts.


This repositioning of the roller assemblies should correct the misalignment of the boat on your trailer. If your boat goes toward the starboard (right) side, reverse the procedure.

Another common reason for boats not centering themselves is putting the trailer too deep in the water, which does not allow the trailer adequate time to center the boat. This is especially true on roller style trailers.

**Note:** Make sure your trailer is not too deep in the water or the boat will float over the rollers and be difficult to load and center.

## **Boarding Your Boat**

To board or re-board your boat be sure to follow the proper steps to avoid injury. The ladder is located under a lid on the swim platform. Lift the latch to free the ladder and unhook the bungee strap holding the telescoping ladder together. Pull on the last rung to extend the ladder out the entire way before placing your weight on it. Using the grab bar at the top of the ladder, carefully climb to enter the boat. Remember to stow the ladder before starting the engine. To stow the ladder, lift it up and push the rungs into each other until the bungee strap can be used to secure the ladder then place it back under the lid and snap the lid closed. The swim platform is designed for people to exit and enter the boat to and from the water. The maximum weight capacity is 300lbs. The platform is not for storing gear or personal equipment.

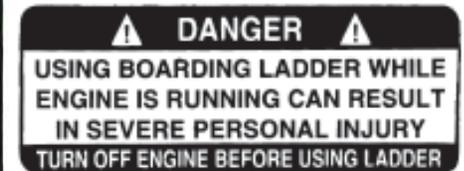

Larger pleasure boats remain stable under most operating conditions because of their beam, draft, and weight displacement. However, the U.S. Coast Guard does require that a capacity plate be affixed to all boats up to 20 feet long. This plate states the maximum load capacity. The plate shows



# 2020 SSI SPORT/SKI & FISH



persons and gear in pounds the boat will handle safely under normal conditions. The U.S. Coast Guard establishes these load capacity ratings. Overloading and improper distribution of weight are significant causes of accidents. Keep weight below maximum limits for safety in turbulent water.

***Important: The presence of the capacity plate does not relieve the boat operator from the responsibility of using common sense or sound judgment. Turbulent waters and adverse weather conditions reduce the maximum load capacity rating of the boat.***

When loading your gear on board your boat, remember to distribute the load evenly, keep the load low and do not overload. Always step onto the boat, never jump! Have someone on the dock pass your gear aboard. Secure all gear firmly so that it will not move or interfere with operation of the boat.

The way your passengers are seated and gear stowed in the boat affects your boat's performance. Passengers should board the boat one at a time and find a seat. Passengers should remain seated during loading of gear to maintain an even trim. Distribute your passengers and gear so that your boat is balanced side to side and front to rear (Figure 5.1)

As the operator, you are responsible for the safety of your passengers.

- **Do not** allow passengers to ride on the bow with feet hanging over the side.
- **Do not** allow passengers to ride sitting on the stern or gunwales. Falling from moving boats is a major cause of fatal recreational boating accidents.
- **Do not** allow passengers to sit in the bow rider area (if so equipped) while underway; doing so will obscure the operator's vision.

A shift in passenger weight changes the planing angle of the hull or the thrust of the propeller. This has the same effect on the boat as if the angle of the drive unit were changed. Minor deficiencies in your boat's ride can be quickly corrected by shifting passengers or gear forward or aft. By

taking a little extra time to carefully place such gear as coolers, water jugs, tackle box, anchor, and tools, you create a more desirable trim. On planing-type boats, utilize stern loading in order to slightly raise the bow.

## Correct

Balanced load: Gives maximum performance



## Incorrect

Overload forward: Causes boat to plow



## Incorrect

Overload aft: Causes boat to porpoise

**Figure 5.1 Boat Landing**





## Fueling

Improper fueling procedures are the most common cause of boat fires.



**DANGER:** Fuel leaking from any part of the fuel system can lead to fire and explosion that can cause serious bodily injury or death. Inspect systems before fueling.



**WARNING:** Do not smoke; extinguish all open flames, STOP engine and other devices that could cause sparks. Do not use electrical switches or accessories.

Ethanol-infused gasoline is widely available to today's boater. However, it may have harmful effects on marine engines and fuel delivery systems. Please refer to your engine manufacturer's owner's manual to find the recommended type and grade of fuel for your engine as well as a better understanding of the effects of ethanol on your engine.

Before fueling your boat, check the entire fuel system for leaks. Check for weakening, hardening, swelling, or corrosion of fuel system components. These include the fuel tank, fuel lines and fittings, fuel filter, and carburetor. Any sign of leakage or deterioration requires immediate replacement before further engine operation.

## Pre-Fueling Procedures

1. Safely and securely moor your boat to the dock.
2. Turn off engine and all electrical equipment including lights, bilge pump, bilge blower, etc.
3. Extinguish all cigarettes, cigars, pipes, or other items that may produce a spark or flame.

4. Close all hatches, windows, doors, and compartments.
5. Make sure a fire extinguisher is readily available.

## Fueling Procedures

1. Always fuel in an area which has sufficient lighting. Gasoline spills are hard to see when lighting is poor or it is dark.



**DANGER:** Fuel vapors are explosive and can become trapped within the lower portions of the boat. Close all hatches, windows, doors, and compartments while fueling your boat.

**Important:** *When fueling or having someone else fuel your boat, be sure the waste or water fill caps are not mistaken for the fuel fill cap. Also, make sure a fishing rod holder is not mistaken for a fuel fill plate.*

2. Remove fuel fill plate. Insert the fuel supply nozzle. Allow nozzle to stay in contact with fitting to prevent possible static-produced sparks.
3. After pumping approximately 5 gallons of fuel into tank, inspect engine and fuel tank area for any signs of fuel leakage. Continue fueling if you do not detect any leaks or other problems.
4. Allow space at the top of the tank for thermal expansion. Do not over-fill tank so that fuel comes out fuel tank vent.

**Note:** Do not over fill tank, causing fuel to spill onto water.

5. If fuel cannot be pumped in at a reasonable rate, check for a plugged fuel vent plug or kink in the line.



## Post-Fueling Procedures

1. When you have finished fueling, replace fuel fill cap and wash off any fuel spillage around fuel fill area. Discard, in a safe place, any rags you may have used to wipe off fuel spills.
2. Open engine compartment and all hatches, windows, doors and compartments closed during fueling. Inspect these areas for fuel fumes or fuel line leakage visually and by smelling. Check out any sign of fuel leakage or any indication of fumes and correct problem before starting the engine.
3. Run bilge blower at least four minutes before restarting engine to ventilate engine compartment.

## Operating Your Boat



**DANGER: Carbon Monoxide Hazard!** A cold engine produces more carbon monoxide than a warm engine. Provide adequate ventilation in the cabin and cockpit to prevent exposure and reduce the possibility of carbon monoxide accumulation. Open all hatches, doors, windows, and side vents to increase air movement.

## Starting the Engine

**Important:** Falls from moving boats are a major cause of fatal recreational boating accidents. Do not allow passengers to ride on the bow with feet hanging over the side or ride while sitting on the stern, gunwales, or seat backs. The Coast Guard considers these acts to be negligent or grossly negligent operation and prohibits them by law.

The following information is only a general guide. Chapter 4 has specific starting instructions for boats with battery selector switches. Detailed

instructions are also in the engine owner's manual. Be sure to read and follow all of those instructions.

1. Secure boat to the dock or mooring slip before attempting to start engine. Keep boat secure until engine is running and warmed up.
2. Check lubricating fluid levels. Check fuel supply to make sure you have enough fuel for your planned excursion.
3. To prevent an explosion or fire, look for leaks in fuel, oil, coolant, exhaust, and power steering systems. Be aware of any odors of these fluids.
4. Make sure the throttle is in the neutral position.

**DANGER:** Gasoline vapors are highly explosive. Run bilge blower for at least 4 minutes before starting engine. Check engine and fuel compartments for fumes or accumulation of fuel

5. Start the engine. Refer to your engine owner's manual for recommended procedures for break-in, service, and other related operation.
6. Turn ignition key to START. Release key and allow to return to RUN after engine starts. If engine fails to start, wait one minute. Move throttle only once to maximum position then back to the neutral position. Try to start engine again.

**Note:** Transmission must be in neutral position before engine will turn over.

**Important:** Do not operate starter continuously for more than 15 seconds without pausing. Allow starter to cool at least three minutes between start attempts.

7. Warm up a cold engine by running it at fast idle speed (as recommended in engine manual) approximately one to two minutes.



# 2020 SSI SPORT/SKI & FISH



## Leaving the Dock

After the engine has warmed up, you are ready to leave the dock. Before you cast off, check all gauges, particularly the oil pressure gauge, for proper readings. Check the operation of the steering by turning the steering wheel to full port and to full starboard while observing outdrive movement. Check that charging system is working properly. Check again for fuel, oil, and exhaust leaks.

When you are sure your boat is ready, check wind, tide, current or other forces that will affect the way you maneuver your boat away from the dock. Then cast off mooring lines and stow fenders.

Shift your boat's engine into forward or reverse depending on whether you want to move the bow or the stern away from the dock first. Move the throttle lever to neutral position. Then push forward quickly and firmly to shift into forward gear or backward to shift to reverse. Your engine should be running at a slow speed as you move away from the dock. If you move the bow out first, watch that the swim platform does not swing into the

## Getting Up to Cruising Speed


After slowly motoring from the dock area to open water, you can safely accelerate to cruising speed. Advance throttle to setting which provides your desired engine speed (RPMs). As you move the throttle forward, engine RPMs increase, and your boat moves faster through the water.

*Important: Acceleration at full throttle is not recommended during the engine "break-in period." This "break-in period" coincides with the engine "20-hour check-up." Do not attempt full throttle acceleration during the first 20 hours of operation.*

When you throttle up and accelerate, your boat increases the trim angle and causes the boat to ride bow-high. From a maximum angle, the boat levels out to its planing attitude as you continue to accelerate. (Figure 5.2) The maximum angle is commonly known as the "hump." You should get over the hump as quickly as possible because visibility, handling, and performance are limited until you do. Only a few seconds at full throttle should be needed; however, the way your boat is loaded, the wind, and

sea conditions affect the time required. When the boat gets over the hump, it reaches its planing attitude. Then, accelerate until your boat reaches a comfortable plane and then throttle down to cruising speed. This also provides for better fuel efficiency.

When maneuvering at low speeds you can reverse (move throttle forward or aft) the shift mechanism. This will react in a braking action.

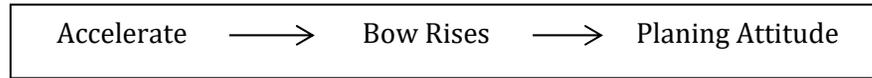

**CAUTION:** When shifting between forward and reverse, always pause in neutral for a few seconds before reversing the rotation of the propeller. This will prevent unnecessary damage to the drive system.



**CAUTION:** High speed acceleration in reverse can create a wake that could wash over the transom and flood the boat.



# 2020 SSI SPORT/SKI & FISH



## Steering Your Boat

**Watch the stern when you turn!** Steering a boat can be compared to driving a car on slippery or icy pavement. Be cautious always. When you turn the wheel, the stern responds first by swinging out in the opposite direction of the bow. When you are trying to avoid an object in the water, this swing could turn out to be critical.

Always give yourself plenty of room to make a turn. You also should slow the speed of your boat while turning. Never make sharp, fast turns as this could cause loss of control. Remember that your passengers should be seated whenever you're underway.

## Power Trim

The operator can adjust his craft to the ideal boat angle for load and water conditions by trimming the drive unit (Figure 5.3). The power trim system allows the operator to adjust the drive angle while underway by changing the angle of the outdrive in relation to the boat's transom. It also allows the operator to raise and lower the drive for trailering, beaching, launching, or operating in shallow water.

**Note: Refer to your engine owner's manual regarding the operation of the power trim controls installed on your boat.**

## Drive Angle

The drive angle of the boat is the relationship between propeller thrust to the planing surface of the hull's bottom. You can improve the performance of the same boat under varying conditions by adjusting the drive angle.

Moving the drive unit angle towards its innermost adjustment brings the propeller in as close as possible to the transom. The angle of the propeller causes an upward thrust which pushes the boat's bow downward as shown on Figure 5.3.



Correct  
Gives maximum performance



Incorrect  
Causes boat to "plow"



Incorrect  
Causes boat to "porpoise"

**Figure 5.3 Trimming the Drive Angle**



# 2020 SSI SPORT/SKI & FISH



By gradually shifting the drive unit from its innermost adjustment towards the outermost adjustment, the propeller thrust pushes in a downward motion. This motion, as shown in Figure 5.3, tends to lift the bow.

After reaching plane, under certain load conditions, your boat could have a tendency to bury its forward V-ed section. The boat will begin to plow and lose speed. If the water is choppy the boat will yaw. A boat will spin out if its bow is excessively buried. The only way to correct this situation is to increase the angle and swing the drive unit outward.

If the drive unit is angled out too far, your loaded boat will be sluggish in coming to plane. Once on plane, your boat will tend to porpoise. To correct this motion, move the propeller inward to decrease the angle between the drive shaft and the transom.



**WARNING:** Excessive trim decreases maneuverability, changes steering characteristics, and may cause “porpoising” (bow oscillates up and down) or “chine walking” (rocking side to side). Use power trim with care.

Very often, the optimum drive unit angle setting for the highest speed while carrying a light load will be just short of the porpoise point. However, such a setting is unsuitable when you have a heavy load or are pulling skiers. By reducing the drive angle, you will find it easier to maneuver the boat and to pull skiers to the surface.

## Stopping Your Boat

A boat has no brakes. Stop the boat by allowing it to slow down to less than 5 miles per hour and then putting the engine in reverse. Slowly increasing reverse power will allow you to stop the boat in a short distance. Remember that a boat does not respond to steering in reverse as well as it does when going forward.

## Additional Underway Information

- Always be aware of local laws on noise limits. Noise means engine noise, radio noise or even yelling by people on your boat. Good seamanship demands that you operate your boat quietly so as not to infringe on the rights of others. Don't use thru-hull exhaust unless you are well offshore



**WARNING:** Check behind you before coming OFF plane. Many accidents occur each year as a result of a driver coming off plane while being followed by a boat that is unable to slow down in time to avoid collision.

- You are responsible for any damage or injury caused by your boat's wake. Observe “No Wake” speed zone warnings. Operate your boat with regard for the safety of other boats and people in your boating area.
- Keep your engine well-tuned to decrease exhaust hydrocarbon emissions that pollute the air and water.

## Anchoring Your Boat



Anchoring is necessary if you stop for recreation or an emergency. Practice anchoring techniques to make sure you know what to do when an emergency occurs. The size and weight of your boat govern the weight of the anchor and the diameter of the anchor line. Your Chaparral dealer can help you select the proper anchoring equipment for your boat.

Use a burying anchor, such as a Danforth or plow anchor, which grips into the bottom and holds your boat secure. Holding power should be more



important than weight. For anchoring in relatively quiet waters, you can use a mushroom anchor as an alternative.

The length of the anchor line should be six to eight times the depth of the water to ensure that the anchor bites into the bottom. The bottom end of the anchor line should be galvanized chain which holds up well as the line moves back and forth on the bottom. The rest of the line should be nylon anchor line which stretches to soften the impact of wind and waves on your boat.

Following are general guidelines for anchoring your boat:

- Secure the anchor line to the bow eye or deck cleat. Do not tie line to hardware not designed to support this stress.
- Use two or more anchors if anchoring overnight or extended periods of time. Otherwise, make sure your boat has enough space to swing full circle in case of shifting winds.
- Keep the anchor and line in an area where it will be readily available in an emergency.

## Dropping Anchor

1. Have a crew member carefully lower anchor, keeping a slight tension on the line as the anchor drops. Maintain tension after the anchor reaches the bottom. Simply throwing the anchor overboard usually fouls the line and requires starting over.
2. Maneuver the boat backwards slowly until the proper length of line is run out.
3. Fasten the anchor line around the bow eye or deck cleat. Anchor fluke should dig into bottom and hold boat in position.



**WARNING:** Keep anchor secure while underway to prevent damage or injury if boat's attitude changes suddenly.

4. Check shoreline landmarks at the time anchor is dropped and check again 30 minutes later. If position has changed, anchor is dragging and

must be reset.

## Weighing Anchor

Weighing, or pulling in the anchor, requires moving the boat in the direction of the anchor and pulling in the anchor as the boat moves. For this reason, the engines should be running. When the line is vertical, pull up firmly on the anchor line to free the flukes from the bottom. If the anchor remains stuck, feed out a few feet of line and attach it to the bow cleat. Maneuver the boat around the anchor, keeping the line taut, until you find an angle that will pull the anchor free.

## Docking Your Boat

***Important: When operating or docking in close quarters, maneuver your boat at idle speed. Proceed with caution in congested areas.***

As you approach the dock or other mooring area, slow down your boat in time to allow your wake to subside before it reaches other boats or docks. As you get close to the dock, check for wind or currents, and allow them to carry the boat toward the dock if you can. When approaching, check that lines are attached to the cleats on the mooring side and that fenders are lowered on that side. Be sure fenders are at the proper height. If you can, have one person at the stern and one person at the bow, each with a boat hook and a mooring line attached to a cleat. Never approach a dock at a speed at which you would not want to bump the dock.

To dock a boat to the starboard side:

1. Approach at an angle approximately 45 degrees to the dock.
2. When the bow is within a few feet of the dock, bring the stern alongside the dock by turning hard to port.
3. Turn to starboard and, at idle speed, put the engine in reverse to bring the stern closer to the dock.

Reverse these steps to dock to the port side



## Mooring Your Boat

When attaching mooring lines to deck cleats on your boat, make a loop in one end of the mooring line. Then, pass it through the hole in the base of the deck cleat. Next, pass the loop back over the deck cleat. The mooring line can now safely be used to secure your boat. Mooring lines may remain attached to the cleats on your boat while underway. The lines must be coiled and placed where they cannot get tangled in deck gear or the propellers.

When you tie up, run the mooring line from your boat around the dock cleat and then back to your boat. This enables you to untie the mooring line without leaving your boat. Just throw off one end of the mooring line and then bring the entire length of mooring line back into the boat (Figure 5.6).

## Shutting Down the Engine

Following are general instructions for engine shutdown. Refer to your engine owner's manual for specific instructions.

1. Allow engine to idle so engine cools gradually.
2. Turn engine off.

**Note:** Manila rope, the standard for many years is not as strong as some ropes made of synthetic materials. For mooring, its ability to stretch is an advantage, but it tends to shrink whenever it gets wet. Nylon rope is strong and elastic. Because of its elasticity, it works well for mooring lines and anchor lines. Rope made of high tensile strength polyester fibers like Dacron™ is just about as strong as nylon rope, but it does not stretch. Kevlar rope is strong and does not stretch, but it is quite expensive. Polypropylene rope tends to deteriorate rapidly when it is exposed to sun light. Because it floats, it is well-suited for use as a tow rope for water skiing. Use for other nautical purposes is not recommended.

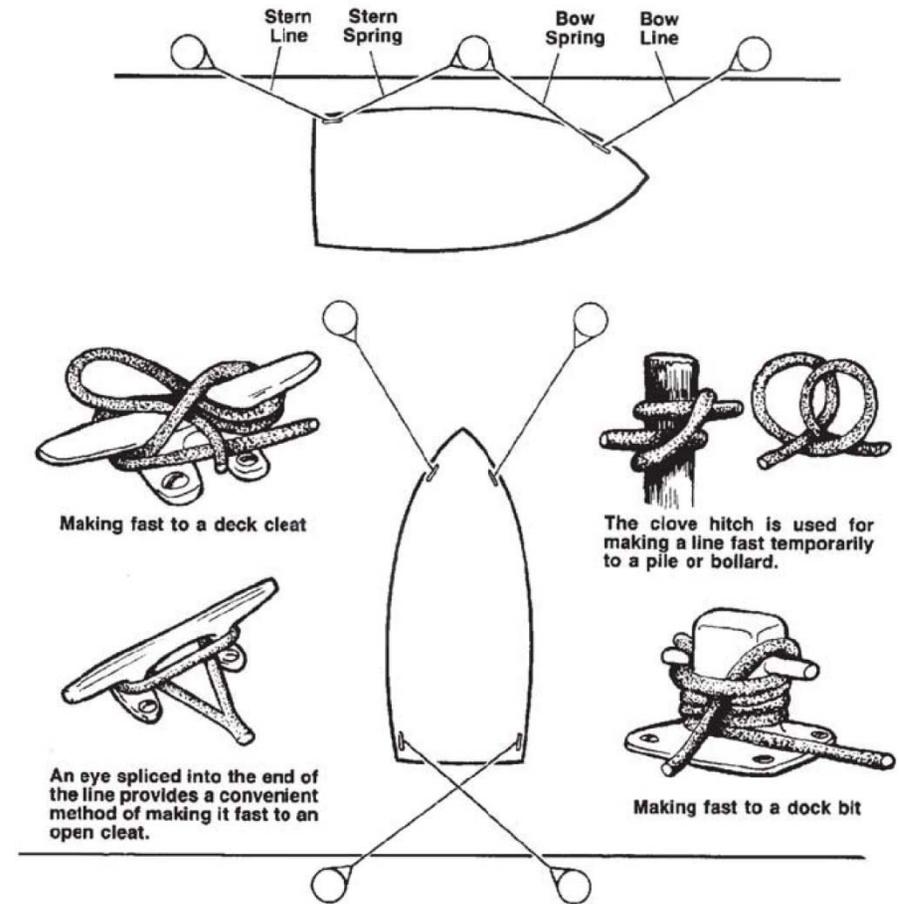


Figure 5.6 Mooring Lines



## Preventive Maintenance and Repair

Do not attempt any repairs on your boat unless qualified to do so. Only use approved marine replacement parts available from your Chaparral dealer. Chaparral recommends having an authorized Chaparral dealer do your maintenance and repair work. Your dealer is qualified to make repairs or modifications to your boat in such a manner as to not compromise safety, design integrity, or warranty coverage. This chapter includes information you can use to do general maintenance and repair. If you choose to do your boat's maintenance and repairs, always refer to the product manuals for detailed information.

### Engine

Refer to the engine owner's manual for detailed information about engine maintenance and repair. That manual has a maintenance and service schedule for the engine on your boat.

### Checking the Oil

**Note: During the engine 20-hour break-in period, Chaparral recommends that you check the oil level every two hours.**

To check the oil:

1. Make sure boat is in the water and engine is stopped.
2. If engine is warm, let it cool for ten minutes to allow oil to drain back into the engine oil pan. This will make the check more accurate.
3. Pull engine oil dipstick out of its sleeve, wipe clean, and push dipstick back into the sleeve. Make certain the dipstick is pushed all the way back in.
4. Pull dipstick out again and check oil level on dipstick. The oil level must be between the ADD and FULL marks on the dipstick.
5. If oil level is at or below the ADD mark you must add oil.
6. Push dipstick back down into the sleeve. Be sure it is all the way in and properly seated.

### Adding Oil

To add oil:

1. Remove oil fill cap from valve cover.
2. Add oil as required to raise the oil level up between the ADD and FULL marks on the dipstick. Do not overfill. One quart (0.95 liter) of oil will be required if oil level was at the ADD mark on the dipstick. Add more oil if oil level was below ADD mark on dipstick.
3. Check oil level after adding oil.

**Note: Chaparral Boats recommends that you use a funnel when you add oil to prevent spillage and to help keep your engine free of surface grime and dirt.**

**Important: The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into or upon the navigable waters of the United States or the waters of the contiguous zone if such discharge causes a film or sheen upon or a discoloration of the surface of the water or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty.**

### Fuel Filter



**WARNING:** Gasoline vapor explodes easily. Explosion is likely to cause fire and may burn you and damage your boat. Always STOP engine and do not smoke or allow open flames in area when changing filter.

Refer to your engine owner's manual for detailed information about checking and maintaining the fuel filter.

The engine exhaust system removes harmful gas created by the engine during combustion. Inspect the system for leaks before each use of the boat. Make sure all hose clamps and connections are tight and there are no cracks in any exhaust system component that would allow carbon monoxide gases to escape.



## **Tune Up**

Tune-ups at recommended intervals keep your engine in top-notch operating condition and help assure the highest possible performance from your engine. Engines should be tuned up every 200 to 300 hours or if engine becomes hard to start or does not run well. If your boat is used less than 200 to 300 hours per year, Chaparral recommends that the boat be tuned up at least once a year.

Refer to your engine owner's manual for detailed information.

## **Fuel System**

This information describes the fuel system excluding the engine. The fuel system provides a clean, continuous supply of fuel to the engine, in addition to helping prevent possible fire and explosion. All fuel systems installed at the Chaparral factory meet federal requirements.

**Note: Refer to your engine owner's manual for detailed information about checking and maintaining the fuel system.**

The fuel system must be inspected frequently and maintained regularly. Check for leaks and/or vapors and repair any problems immediately. Keep fuel tank filled during the boating season to prevent moisture from condensing in the tank.

## **Monthly Inspection**

**Note: A trained marine mechanic should replace parts or repair the fuel system. See your Chaparral dealer for parts and repair.**

1. Starting at the fuel tank, check the entire fuel system for leaks or vapors.
2. Check fuel lines and hoses for wear, kinks, cracks, or deterioration.
3. Inspect fuel line fittings, and fuel pump to make sure mounting brackets are tight.
4. Check fuel ventilation ducts and clamps for wear or damage.

Refer to the engine owner's manual for recommended frequency for checking stern drive unit and its oil.



**CAUTION:** Hot oil in operating stern drive can burn you. Do not remove oil vent plug immediately after using boat. Hot oil expands and flows rapidly from vent plug opening if oil vent plug is removed.

## **Engine Alignment Check**

Consult your Chaparral dealer for more information about checking engine alignment.

## **Propeller**

**Note: Refer to the propeller manufacturer's manual for installation, removal, and further detailed information.**

The propeller shipped with your boat is the size Chaparral recommends for the best overall performance. However, factors such as altitude, temperature, load, bottom growth, and propeller condition can affect your boat's performance. Consult your Chaparral dealer regarding your specific performance requirements.

Periodically check propeller for excessive wear and damage. Repair or replace, if required.

## **Steering System**

**Note: Some engine models do not have power steering as a standard feature. Refer to the engine owner's manual or check with your dealer for details.**

If your boat has a power steering system, it needs periodic maintenance to be trouble-free and safe. Regular checks of the complete system are essential.

Lubricate, inspect, and maintain system regularly.



# 2020 SSI SPORT/SKI & FISH



**Note: Operating boat in saltwater is classified as excessive use.**

1. Lubricate control valve through grease fitting with multi-purpose lubricant until grease is visible around rubber boot.
2. Coat power steering output shaft and exposed steering cable end with multi-purpose lubricant.
3. Lubricate cable end guide pivot point with SAE 30W engine oil.
4. Run engine for 20 to 30 minutes, then check power steering fluid level. If low, add type "A" automatic transmission fluid to bring level up to "FULL" mark on the dipstick.

**Note: If engine is cold, the correct fluid level should be at the ADD mark to allow for oil expansion when engine is hot.**

5. Check all hydraulic lines and hoses for leaks. Make sure no lines and hoses rub against other parts and or come into contact with any extremely hot parts. Tighten all fittings and clamps as required.
6. Check all bolts for tightness.

Consult your Chaparral dealer regarding all repairs or replacement parts.

## **Bilge** **Inspection**

Check the bilge before you use your boat—every time! A small amount of water in the bilge is normal and not a cause for concern. If the amount of water is excessive, check for water leaks. Repair leaks immediately.

If the bilge is ever filled with fuel or oil, check engine, hoses, fuel tank(s), etc. for leaks. Repair immediately.

**Important: Pumping fuel or oil overboard into the water violates the Federal Clean Water Act. Pump into suitable container and dispose of properly.**

## **Cleaning**

Run bilge until pump is dry. Remove all sand, silt, dirt, or foreign material. Make sure all limber holes are open and strainers are clean. Use bilge cleaner to remove any obvious oil stains.

**Important: Never use any flammable solvents for cleaning the bilge.**

**Check with your Chaparral dealer for recommended cleaners.**



**WARNING:** Gasoline or vapors in bilge can explode. Remove all sources of ignition. Do not start engine, repair immediately.



## Interior and Exterior Care

The following information will help you keep the interior and exterior of your boat in tip-top shape. If you need more specific information, contact your Chaparral dealer.

**Note: Before you use a particular cleaning solution or method, test the material to be cleaned in a hidden or inconspicuous area for possible adverse reactions. Use cleaning agents sparingly. Never discharge cleaning solutions into the waterways. Do not use products containing phosphates, chlorine, solvents, or non-biodegradable or petroleum based products.**

### Fiberglass and Gelcoat

The hull and deck are made of fiberglass. The outer layer of the hull and deck is a color pigmented polyester resin, called gelcoat. Gelcoat is highly resistant to scratches that occur during normal boat use. Nevertheless, during the life of your boat, some damage to the gelcoat is bound to occur.

### **Gelcoat Maintenance**

To remove and prevent the buildup of most salt, soil, and grime, clean the hull and deck regularly with household detergent and water.

**Note: Make sure household detergent does not contain ammonia or chlorine. Because ammoniate or abrasive cleaners dull and discolor the gelcoat surface, they are not recommended for routine maintenance.**

Gelcoat surfaces are very resistant to deep stains. To remove minor stains, wash the affected area with a soft cloth and household detergent. Then rinse thoroughly with clear water. If deep stains do occur, use a special fiberglass cleaner and stain remover.

Waxing the gelcoat surface regularly will help prevent soiling and preserve its luster. Chaparral recommends a fiberglass wax that fills the gelcoat pores. Chemicals in fiberglass wax screen out harmful ultraviolet rays that cause fading of the gelcoat color.



**CAUTION:** Waxed gelcoat is slippery. Falls causing bodily injury or falls overboard are possible. Never wax deck surfaces that require sure footing.

### **Repairing Gelcoat Damage**

#### **Minor Scratches**

Repair minor scratches with automotive rubbing compound or polishing wax. Follow the manufacturer's instructions. Although the scratches may not disappear completely, they should not be as noticeable. Apply rubbing compound or polishing wax to a damp, soft cloth. Rub the gelcoat surface with the damp, soft cloth in a circular motion.

#### **Chips, Hairline Cracks, and Small Patches**

Your Chaparral dealer has qualified personnel capable of making this type of repair.

Chaparral uses the finest gelcoats and resins available to prevent gelcoat crazing and hairline cracks. Over time your boat may develop slight hairline cracks in the outermost gelcoat layer. These usually do not damage the structure of your boat or affect its integrity.



## **Hull Bottom Maintenance**

If your boat will be in water continuously for more than 60 days in any 90-day period, Chaparral recommends sealing the hull bottom with a high quality barrier coating. Failure to do so will void your hull blister warranty. Your Chaparral dealer can recommend the best barrier coating product for your boat.

Never use wire brushes, scouring pads, or other abrasive materials or solutions on the bottom surface of your boat. They cause small scratch marks that will collect dirt, silt, sand, marine growth and other foreign materials.

Keep the hull bottom of your boat clean. Check it regularly for any signs of excessive wear or damage. Make needed repairs to the hull bottom as soon as possible. Accumulation of natural coatings from water and marine growth can create drag and limit the efficiency of your boat.

## **Hardware and Fittings**

**Note: Always follow the manufacturer's recommendations found in your owner's packet for cleaning and maintaining deck hardware and fittings. These recommendations include the proper cleaning methods and cleaning agents.**

### **Inspection**

Inspect hardware and fittings to make sure they are tight. All screws, bolts, clamps, cleats, etc., should be secure.

### **Cleaning and Care**

- Always clean stainless steel frequently with soap and water. Any cleaner safe for glass is usually safe for stainless steel.
- Always remove rust spots as soon as possible with a brass, silver, or chrome cleaner. Irreversible pitting will develop under rust that remains on stainless steel for any period of time.
- Always use a cleaner, like a good car wax, for added beauty and protection.
- Never use coarse abrasives like sandpaper or steel wool on stainless steel. These may actually cause rusting.

- Never clean with mineral acids or bleaches.
- Never leave stainless steel in contact with iron, steel, or other metals which cause contamination leading to rust or corrosion.

## **Windshield and Portholes**

Clean windshield safety glass with a glass cleaner or ammonia water; then rinse with plenty of clear water.

***Important: Solvents can penetrate glass or porthole surfaces and cause hazing. Hazing obstructs visibility. Never use acetone, benzene, carbon tetrachloride, lacquer thinner or similar solvents to clean glass or portholes.***

The canvas or weather covering windows are made of a synthetic material. Wash any Plexiglass, clear vinyl or other synthetic materials with a mild detergent or dishwashing liquid and water solution, then rinse with plenty of clear water.

When stowing plastic or vinyl windows, be sure they are dry. Make sure the vinyl is rolled and not folded or creased. Store them in a bag that will breathe.

## **Carpet**

After a boating excursion, allow carpet to dry completely in the sun to prevent mildew.

Vacuum carpet frequently. Clean up spills as quickly as possible. Remove spots before they dry. Clean indoor/outdoor carpet with a mild detergent or dishwashing liquid and warm water solution and a scrub brush. After cleaning, thoroughly rinse carpet with clear water. Your owner's packet has more detailed information provided by the manufacturer. Follow the manufacturer's recommendations for cleaning and stain removal.

Ensure all snap-in carpets are stowed prior to trailering your boat to prevent damaging the carpet.



# 2020 SSI SPORT/SKI & FISH



## Seats Coverings and Vinyl

Because seat coverings and trim are made of expandable vinyl, extreme temperatures have little effect on them.

**Note: Follow the manufacturer's recommendations for cleaning and seat covering and removing stains. These recommendations include the proper cleaning methods and cleaning agents.**

### Care

Place removable exterior cushions inside the boat when they are not in use.

### Cleaning


Remove stains as soon as possible to eliminate any possible reaction between the staining agent and the vinyl. Wipe away dirt and smudges with mild soap and warm water. If additional cleaning is required, scrub with a soft bristle brush to remove dirt from textured patterns. Dry with a soft, lint-free cloth or towel.

Follow manufacturer's instructions closely. NEVER use steel wool, powdered abrasive cleaners, or bleaches. They will mar the surface and leave an unsightly appearance. Never use bleaches or solvents of any kind on monogram parts. Use mild soap and water. Bleaches and solvents will cause monograms to fade.

To store cushions onboard boat for winter or extended periods of time, open zippers and elevate cover away from foam padding. Place a small rounded object (for example, a plastic bowl) inside to allow for air circulation.


### Helm seat with forward/reverse lever

While lever is in down position, seat movement is locked. Lift lever to slide seat forward or aft.

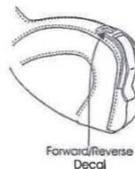

### Helm seat with rotate lever

While lever is in down position, seat movement is locked. Lift lever to rotate seat left or right.

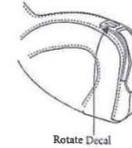

### Helm seat with rotate knob and swivel tab

Rotate knob counter clockwise to loosen slide mechanism allowing seat to slide forward and aft.

Lift tab forward to seat to allow seat to swivel left or right.



### For all seat mechanisms (each mechanism is not in every boat):

1. Periodically check to ensure all fasteners are secure and in place
2. Periodically check to ensure all warning labels and decals are legible and replace as needed.
3. In a salt water environment, it is recommended that routinely items are washed with soap and fresh water. To help prevent corrosion, wax all stainless steel surfaces and fasteners with a good marine grade polish/wax after cleaning.
4. Periodically check and keep all sliding, adjustable threaded surfaces, or pivoting surfaces greased with good marine grade lithium based grease and in good operable condition.





## **Canvas (Weathering Coverings)**

The canvas, or weather coverings, is 100% acrylic yarn. Besides its resistance to mildew, rot and weather, canvas also resists industrial pollutants and the effects of ultraviolet light from the sun. Canvas is breathable and, therefore, is not waterproof. Mooring covers are waterproof.

### **Care**

- Keep the top up when boat is not in use or when it's raining.
- Never trailer your boat with the canvas up. None of the canvas or covers supplied with your boat were designed for the stress of highway speed trailering, and to do so may damage the canvas.
- Keep canvas clean. Acrylic fabric will not support mildew growth, but dirt and dust on the canvas will.
- Lubricate zippers with paraffin and snaps with petroleum jelly.
- If canvas or seams leak, apply a light coating of fluorocarbon based water repellent, or "303 High Tech Fabric Guard," available at most marine dealers.
- Allow all canvas to air dry before storing. Never store canvas damp or wet. Provide proper ventilation to limit the possibility of mildew.
- Avoid mooring under trees.
- Do not tow your boat with canvas attached to any hull or windshield mounted fasteners.
- Be careful not to scratch clear vinyl windows. Dry well before stowing. When stowing clear vinyl, make sure the vinyl is rolled and not creased.

### **Cleaning**

- Wet down all canvas material. Scrub with a soft bristle brush and a solution of mild soap and water. Never use a detergent or bleach on your canvas.
- Brush or sweep the underside of the top. Spray with Lysol or other disinfectant to prevent mildew.



## Winterizing and Storage

This chapter tells you how to winterize and store your Chaparral boat in regions where temperatures fall below freezing. If you keep your boat in an area not requiring winter storage, Chaparral recommends you perform an annual inspection, similar to the preparation for storage as indicated in this chapter. With proper care, you will have many years of enjoyable boating with your Chaparral boat.

### Lifting the Boat



**WARNING:** Lift slings may slip on the hull and result in serious injury or death from dropped load. Exercise extreme caution if in the vicinity of such activity. If possible, slings should be tied together before lifting.

Unless your boat is trailerable, have your dealer or qualified marina personnel lift your boat out of the water for you. Each boat has main frame components designed to support the boat when it is being lifted out of the water. Severe gelcoat crazing or more serious hull damage can occur if the lifting slings exert pressure on the gunwales. Flat, wide belting-type slings should be used. Don't use cable-type slings. The spreader bar at each sling should be as long as the distance across the widest point the sling surrounds.

- Never hoist the boat with more than a minimal amount of water in the bilge.
- Before lifting the boat, empty fuel and water tanks, especially if they have large capacities.
- Be sure to position slings as indicated by the diagrams in Chapter 3.
- Do not use deck cleats or bow or stern eyes for lifting the boat.
- Be sure boat remains level while being lifted to avoid sling movement or boat damage

- If using any boat lifting device other than slings, position lifting device so as not to put pressure on any underwater hull component including trim tabs.

### **Cradle**

A cradle is the ideal support for your boat whenever it is not in the water. Properly designed and located, the cradle will support the boat under the main frames. Support at these points is essential for preventing damage to the hull. Purchase a cradle from your dealer to ensure that your boat has the correct support.

### Dry Storage Preparation

**Note: Refer to Chapter 7, Interior and Exterior Care, for specific cleaning solutions and procedures.**

### **Deck**

- Wash the deck and walkway surfaces.
- Clean all deck hardware, and apply a coat of rust inhibitor.
- Clean the indoor/outdoor carpet.

### **Hull**

- Scrape off any barnacles or crusted marine growth.
- Scrub hull thoroughly to remove marine growth, scum and loose bottom paint.
- Inspect underwater gear and propeller for excessive wear or damage
- Apply fresh coat of bottom paint.
- Remove hull drain plug; store it in a safe place. Allow bilge water to drain, raise bow of boat during period of storage.



## **General Housekeeping**

- Clean boat interior including all cabinets.
- Lay all plastic cushions flat.
- Check for adequate air circulation around life jackets and other safety equipment left onboard.
- Clean and dry bilge. Remove any materials such as rags, sponges, or other cleaning material.
- Weather permitting, open all doors, hatches, portals, and windows to air out the interior for a day or two.
- If covering boat while in storage, use a cover constructed of fabric that allows for plenty of ventilation.

## **Systems and Components**

In regions where temperatures fall below freezing, winterization of the systems and components is necessary. Failure to do so will seriously damage them. They include, but are not limited to: strainer, ballast pump, Porta-Potti, head, holding tank, water tank, sewer system, and water systems. As a result of not being able to completely drain water systems with a water heater installed, it is recommended that potable water system antifreeze be run through the entire system at the time of winterization. This needs to be COMPLETELY flushed before use the following spring.

**Note: Chaparral strongly recommends having a qualified dealer perform winterization procedures for your boat.**

## **Engine**

***Important: In regions where temperatures fall below freezing, winterizing your engine is necessary. Failure to do so will seriously damage the engine. Refer to your engine owner's manual for detailed winterization information.***

Change engine oil before storing your boat. Refer to the instructions in your engine owner's manual.

## **Fuel System**

Add a gasoline stabilizer solution to the fuel tank. Follow the product manufacturer's recommended procedure.

## **Battery**

Remove battery from boat and store battery in a cool dry place away from freezing temperatures.



**WARNING:** Battery electrolyte can cause severe eye damage and burn your skin. Wear goggles, rubber gloves and a protective apron when working with battery. If electrolyte spills, wash the area with a solution of baking soda and water.

- Cover battery terminals with rubber or plastic caps to prevent accidental contact between battery posts and metal objects.
- Clean outside battery case, terminals, and battery clamps with a baking soda and water solution. Do not allow solution to enter battery cells.
- Clean battery posts and clamps with fine grit emery cloth. Use a light sanding motion when cleaning
- Apply a light coat of petroleum jelly to cover end of battery cables.
- Recharge battery monthly or trickle charge continuously while battery is stored.



## Model Specification

LOA .....	19 ' 4 "	5.89 m
Beam .....	7 ' 6 "	2.29 m
Approximate Dry Weight .....	2540 lbs	1152 kg
(With Lightest Engine & No Options)		
Deadrise .....	18 Deg	
Fuel Capacity .....	30 Gal.	114 L
Maximum HP.....	200 HP	149 kW
Bridge Clearance without Arch.....	4 ' 6 "	1.37 m
Bridge Clearance with Arch .....	7 ' 7 "	2.31 m
Bridge Clearance with Folded Arch .....	4 ' 6 "	1.37 m
Draft-Down.....	31 "	79 cm
Draft-Up.....	13 "	33 cm
Passenger Capacity.....	11 Persons/1,500 lbs	

### 19 SSI Sport



## Model Specification

LOA .....	19 ' 4 "	5.89 m
Beam .....	7 ' 6 "	2.29 m
Approximate Dry Weight .....	2540 lbs	1152 kg
(With Lightest Engine & No Options)		
Deadrise .....	18 Deg	
Fuel Capacity .....	30 Gal.	114 L
Maximum HP.....	200 HP	149 kW
Bridge Clearance without Arch.....	4 ' 6 "	1.37 m
Bridge Clearance with Arch .....	7 ' 7 "	2.31 m
Bridge Clearance with Folded Arch .....	4 ' 6 "	1.37 m
Draft-Down.....	31 "	79 cm
Draft-Up.....	13 "	33 cm
Passenger Capacity.....	11 Persons/1,500 lbs	

### 19 SSI Ski & Fish



## Model Specification

LOA .....	20 ' 1 "	6.12 m
Beam .....	7 ' 6 "	2.29 m
Approximate Dry Weight .....	2550 lbs	1157 kg
(With Lightest Engine & No Options)		
Deadrise .....	18 Deg	
Fuel Capacity .....	32 Gal.	121 L
Maximum HP.....	150 HP	112 kW
Bridge Clearance without Arch.....	4 ' 1 "	1.24 m
Bridge Clearance with Arch .....	7 ' 3 "	2.21 m
Bridge Clearance with Folded Arch .....	4 ' 4 "	1.32 m
Draft-Down.....	30 "	76 cm
Draft-Up.....	15 "	38 cm
Passenger Capacity.....	11 Persons/1,500 lbs	

## 19 SSI Outboard



## Model Specification

LOA .....	20 ' 1 "	6.12 m
Beam .....	7 ' 6 "	2.29 m
Approximate Dry Weight .....	2700 lbs	1225 kg
(With Lightest Engine & No Options)		
Deadrise .....	18 Deg	
Fuel Capacity .....	32 Gal.	121 L
Maximum HP.....	150 HP	112 kW
Bridge Clearance without Arch .....	4 ' 1 "	1.24 m
Bridge Clearance with Arch .....	7 ' 3 "	2.21 m
Bridge Clearance with Folded Arch .....	4 ' 4 "	1.32 m
Draft-Down.....	30 "	76 cm
Draft-Up.....	15 "	38 cm
Passenger Capacity.....	11 Persons/1,500 lbs	

## 19 SSI Outboard Ski & Fish



## Model Specification

LOA .....	21 ' 0 "	.....	6.40 m
LOA with Platform .....	23 ' 0 "	.....	7.01 m
Beam .....	8 ' 4 "	.....	2.54 m
Approximate Dry Weight .....	3100 lbs	.....	1406 kg
(With Lightest Engine & No Options)			
Deadrise .....	20 Deg		
Fuel Capacity .....	40 Gal.	.....	151 L
Maximum HP.....	250 HP	.....	186 kW
Bridge Clearance without Arch.....	4 ' 8 "	.....	1.42 m
Bridge Clearance with Arch .....	8 ' 2 "	.....	2.49 m
Bridge Clearance with Folded Arch .....	4 ' 8 "	.....	1.42 m
Draft-Down.....	32 "	.....	81 cm
Draft-Up.....	15 "	.....	38 cm
Passenger Capacity.....	12 Persons/1,600 lbs		

### 21 SSI Sport



## Model Specification

LOA .....	21 ' 0 "	.....	6.40 m
LOA with Platform.....	23 ' 0 "	.....	7.01 m
Beam .....	8 ' 4 "	.....	2.54 m
Approximate Dry Weight .....	3350 lbs	.....	1520 kg
(With Lightest Engine & No Options)			
Deadrise .....	20 Deg		
Fuel Capacity .....	40 Gal.	.....	151 L
Maximum HP.....	250 HP	.....	186 kW
Bridge Clearance without Arch.....	4 ' 8 "	.....	1.42 m
Bridge Clearance with Arch .....	8 ' 2 "	.....	2.49 m
Bridge Clearance with Folded Arch .....	4 ' 8 "	.....	1.42 m
Draft-Down.....	32 "	.....	81 cm
Draft-Up.....	15 "	.....	38 cm
Passenger Capacity.....	12 Persons/1,600 lbs		

## 21 SSI Ski & Fish



## Model Specification

LOA .....	21 ' 6 "	.....	6.55 m
Beam .....	8 ' 4 "	.....	2.54 m
Approximate Dry Weight .....	2800 lbs	.....	1270 kg
(With Lightest Engine and No Options)			
Deadrise .....	20 Deg		
Fuel Capacity .....	40 Gal.	.....	151 L
Maximum HP.....	200 HP	.....	149 kW
Bridge Clearance without Arch .....	4 ' 8 "	.....	1.42 m
Bridge Clearance with Arch .....	8 ' 2 "	.....	2.49 m
Bridge Clearance with Folded Arch .....	4 ' 8 "	.....	1.42 m
Draft-Down.....	30 "	.....	76 cm
Draft-Up.....	15.5 "	.....	39 cm
Passenger Capacity.....	12 Persons/1,600 lbs		

### 21 SSI Outboard



## Model Specification

LOA .....	21 ' 6 "	.....	6.55 m
Beam .....	8 ' 4 "	.....	2.54 m
Approximate Dry Weight .....	3050 lbs	.....	1383 kg
(with Lightest Engine & No Options)			
Deadrise .....	20 Deg		
Fuel Capacity .....	40 Gal.	.....	151 L
Maximum HP.....	200 HP	.....	149 kW
Bridge Clearance w/o Arch.....	4 ' 8 "	.....	1.42 m
Bridge Clearance w/ Arch .....	8 ' 2 "	.....	2.49 m
Bridge Clearance w/ Arch Folded.....	4 ' 8 "	.....	1.42 m
Draft-Down.....	30 "	.....	76 cm
Draft-Up.....	15.5 "	.....	39 cm
Passenger Capacity.....	12 Persons/1,600 lbs		

## 21 SSI Outboard Ski & Fish



## Model Specification

LOA .....	23 ' 0 "	.....	7.01 m
LOA w/Swim Platform .....	25 ' 2 "	.....	7.67 m
Beam .....	8 ' 6 "	.....	2.59 m
Approximate Dry Weight .....	3600 lbs	.....	1633 kg
(With Lightest Engine & No Options)			
Deadrise .....	20 Deg		
Fuel Capacity .....	45 Gal.	.....	170 L
Maximum HP.....	300 HP	.....	224 kW
Bridge Clearance without Arch .....	4 ' 6 "	.....	1.37 m
Bridge Clearance with Arch .....	7 ' 11 "	.....	2.41 m
Bridge Clearance with Folded Arch .....	5 ' 5 "	.....	1.65 m
Draft-Down.....	31 "	.....	79 cm
Draft-Up.....	17 "	.....	43 cm
Passenger Capacity.....	13 Persons/1,650 lbs		

### 23 SSI Sport



## Model Specification

LOA .....	23 ' 6 "	7.16 m
Beam .....	8 ' 6 "	2.59 m
Approximate Dry Weight .....	3400 lbs	1542 kg
(With Lightest Engine and No Options)		
Deadrise .....	20 Deg	
Fuel Capacity .....	56 Gal.	212 L
Maximum HP.....	250 HP	186 kW
Bridge Clearance without Arch .....	4 ' 6 "	1.37 m
Bridge Clearance with Arch .....	7 ' 11 "	2.41 m
Bridge Clearance with Folded Arch .....	5 ' 5 "	1.65 m
Draft-Down.....	28 "	71 cm
Draft-Up.....	14 "	36 cm
Passenger Capacity.....	13 Persons/1,650 lbs	

### 23 SSI Outboard



## Model Specification

LOA .....	24 ' 6 "	.....	7.47 m
Beam .....	8 ' 6 "	.....	2.59 m
Approximate Dry Weight .....	4400 lbs	.....	1996 kg
(With Lightest Engine & No Options)			
Deadrise .....	21 Deg	.....	
Fuel Capacity .....	64 Gal.	.....	242 L
Holding Capacity (Optional).....	3.8 Gal.	.....	14 L
Water Capacity (Optional).....	10 Gal.	.....	38 L
Maximum HP.....	350 HP	.....	261 kW
Bridge Clearance without Arch.....	4 ' 8 "	.....	1.42 m
Bridge Clearance with Arch .....	8 ' 1 "	.....	2.46 m
Bridge Clearance with Folded Arch .....	5 ' 4 "	.....	1.63 m
Draft-Down.....	35 "	.....	89 cm
Draft-Up .....	20 "	.....	51 cm
Passenger Capacity.....	14 Persons/2,006 lbs		

## 24 SSI Sport



## **Recommissioning**

**NOTE: For detailed information on recommissioning your boat's systems and equipment, refer to the owner's manual for each system or component.**

1. Inspect, visually and by smelling, the fuel system and all associated components for proper connections, wear, leaks, or other damage and needed repair.

***Important: Inspection of the fuel system at recommissioning is very important. We cannot overemphasize our concern for your safety.***

2. Clean battery terminal posts with wire brush or steel wool before reinstallation.
3. Check charge on battery. Recharge or replace if necessary.
4. Inspect all battery wiring. Repair or replace if necessary.
5. Attach battery cables, and tighten cable clamps.
6. Apply petroleum jelly or marine grade grease on battery posts and clamps to eliminate air pockets and possible acid buildups.
7. Reinstall hull drain plug after coating threads with petroleum jelly.
8. Clean bilge area.
9. Inspect all wiring for fraying, wear, loose connections, or other damage. Repair or replace, if necessary.
10. Test operation of navigation lights and other lighting onboard. Inspect all switches, controls, and other related equipment for proper operation. Repair or replace as necessary.
11. Inspect all life jackets, anchor lines, and other safety equipment for proper operation and physical condition. Repair or replace, if necessary.



### CHAPARRAL BOATS, INC. LIMITED WARRANTY 2020 Model Year

#### ORIGINAL OWNER LIFETIME LIMITED STRUCTURAL HULL PROVISION (Transferrable)

Subject to the conditions, exclusions and limitations set forth below, Chaparral warrants to only the *First Retail Purchaser*<sup>1</sup> of a new Chaparral boat, at Chaparral's option, either Chaparral or its authorized dealer will repair the fiberglass hull<sup>2</sup> manufactured by Chaparral if it is found to be Structurally Defective<sup>3</sup> in material or workmanship for as long as the first retail purchaser owns the boat. Chaparral's obligation to repair a hull shall be limited to the fair market value<sup>4</sup> of the owner's boat at the time of the loss. The boat owner is responsible for costs associated with freight to and from point of repair. For first subsequent owners<sup>5</sup>, upon Chaparral's receipt and approval of a warranty transfer form, Chaparral warrants the same items, but limits the coverage to a period ending (5) years after the date of delivery<sup>6</sup> to the *first* retail purchaser. See your Owner's Manual for a copy of the warranty transfer form and details about cost and documentation requirements.

#### TRANSFERABLE ONE-YEAR LIMITED COMPONENTS PROVISION (Transferrable)

Subject to the conditions, exclusions and limitations herein Chaparral warrants to the *first retail purchaser and first* subsequent purchaser who has registered the transfer with Chaparral in the manner provided above for a period of one year from the date of delivery to the *First Retail Purchaser*, that each new fiberglass boat manufactured by Chaparral is free from defects in material and workmanship. For first subsequent owners, upon Chaparral's receipt and approval of a warranty transfer form, Chaparral warrants the same items, but limits the coverage to a period ending (1) year after the date of delivery to the *first* retail purchaser. See your Owner's Manual for a copy of the warranty transfer form and details about cost and documentation requirements.

REPAIR OR REPLACEMENT OF DEFECTIVE PARTS SHALL BE AT CHAPARRAL'S SOLE DISCRETION AND THE SOLE AND EXCLUSIVE REMEDY OF THE PURCHASER. CHAPARRAL SHALL NOT BE LIABLE FOR CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES OF ANY NATURE. THIS WARRANTY GIVES THE PURCHASER SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THE RIGHTS AND REMEDIES OF THIS WARRANTY ARE EXCLUSIVE AND GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, TO INCLUDE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHETHER ARISING BY LAW, CUSTOM, CONDUCT OR USAGE OF TRADE. CHAPARRAL FURTHER DISCLAIMS ANY LIABILITY FOR ECONOMIC LOSS ARISING FROM CLAIMS OF PRODUCT FAILURE, NEGLIGENCE, DEFECTIVE DESIGN, MANUFACTURING DEFECT, FAILURE TO WARN AND/OR INSTRUCT, LACK OF SEAWORTHINESS, AND ANY OTHER THEORY OF LIABILITY NOT EXPRESSLY COVERED UNDER THE TERMS OF THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO SOME LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. IN THE EVENT THAT IMPLIED WARRANTIES ARE FOUND TO EXIST UNDER THE LAW OF A PARTICULAR STATE, NOTWITHSTANDING THE EXCLUSION CONTAINED HEREIN, THE DURATION OF SUCH WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE LIMITED WARRANTY STATED HEREIN.



# 2020 SSI SPORT/SKI & FISH



## STRUCTURAL DECK<sup>7</sup> PROVISION (Non-transferrable)

Subject to the conditions, exclusions and limitations set forth below, Chaparral warrants to the *First Retail Purchaser* of a new Chaparral boat for a period of five (5) years from the date of delivery, that either Chaparral or its authorized dealer will repair the fiberglass deck manufactured by Chaparral if it is found to be Structurally Defective. Chaparral's obligation to repair a deck is limited to the fair market value of the owner's boat at the time of the repair.

### HULL BLISTER<sup>8</sup> PROVISION (Non-Transferrable)

Subject to the conditions and limitations of coverage and liability set forth below, and provided the original factory gel coat surface has not been altered, Chaparral warrants to the *first retail purchaser* of a new Chaparral boat that for a period of five (5) years after the date of delivery, Chaparral will pay all or a portion of the cost to repair or correct any laminate blistering on underwater gel coated surfaces of the hull as a result of defects in material or workmanship according to the following prorated schedule:

Less than two years from date of purchase- <b>100%</b>	Three to Four years from date of purchase - <b>50%</b>
Two to three years from date of purchase- <b>75%</b>	Four to five years from date of purchase- <b>25%</b>

Reimbursement will be limited to one repair, not to exceed \$100 per foot of boat length excluding the swim platform and bow pulpit. Prior authorization must be obtained from Chaparral before commencement of repairs. Authorization will only be given for repairs that include the addition of a barrier coat and bottom paint to that portion of the hull that rests in the water. Repair of the blisters will be at the expense of Chaparral. The cost of barrier coat and bottom paint will be at the expense of the owner.

This Five-Year Limited Hull Blister Warranty is voided in the event the original factory gel coat is altered by damage, accident repair, sanding, scraping, sandblasting or improper surface preparation for the application of a marine barrier coating or bottom paint. This warranty will also be voided if the hull bottom is in water for more than 60 days during any 90-day period of time unless prior to the commencement of the 90-day period of time, a marine barrier coating has been properly applied to the hull bottom. This warranty is subject to the conditions and limitations to coverage and liability discussed below.

### COCKPIT UPHOLSTERY AND CANVAS PROVISION (Non-transferrable)

Subject to the conditions, exclusions and limitations discussed below, Chaparral warrants to only the *First Retail Purchaser* of a new boat that for a period of three (3) years from the date of delivery, Chaparral will repair or replace any cockpit upholstery or canvas found to be structurally defective in material or workmanship.

### EXTERIOR GEL COAT PROVISION (Non-transferrable)

Subject to the conditions, exclusions and limitations discussed below, Chaparral warrants to the *First Retail Purchaser* of a new boat that for a period of one (1) year from the date of delivery, Chaparral will repair cracks, crazing or other cosmetic blemishes in the exterior gel coat finish of the hull and the deck resulting from defective materials or workmanship according to the following prorated schedule:

- Less than six months from date of delivery-100%



# 2020 SSI SPORT/SKI & FISH



- Six months to one year from date of delivery -50%

This warranty expressly excludes fading of gel coat at or below the waterline.

## EXCLUSIONS

### THE LIMITED WARRANTIES SET FORTH ABOVE DO NOT COVER:

- 1) Rental boats, Club boats, Charter boats, or any Commercial Use Boats are not covered under the standard Chaparral warranty, but are afforded a limited coverage warranty as described in a separate warranty published in the Chaparral Dealer Manual;
- 2) Any boat that has been subject to any type of repossession;
- 3) Any boat not purchased by a first retail purchaser, or a subsequent purchaser, as defined herein;
- 4) Any failure or defect resulting from normal wear and tear, climatic conditions, use under other than normal conditions or the lack of proper maintenance;
- 5) Any boat which has been powered or loaded in excess of the manufacturer's maximum horsepower and/or capacity recommendations;
- 6) Any boat used or once used for racing, law enforcement, or military purposes;
- 7) Any boat that has been subject to misuse, negligence, an accident, or structural modifications;
- 8) Plexiglas windscreen breakage, windshield breakage, windshield leakage;
- 9) Fuel gauges and fuel gauge systems, or fuel tanks;
- 10) Except as covered by One-Year Prorated Limited Exterior Gel Coat Warranty and the Five-Year Prorated Limited Hull Blister Warranty, defects in paint or gel coat finishes including blisters below the waterline, cracking, crazing, or minor discoloration;
- 11) Damage, rot, mildew or other damage to upholstery, canvas, vinyl, plywood, carpet and other materials and components within the interior as a result of water damage including, without limitation, condensation or precipitation;
- 12) Installation of engines, arches, swim platforms, or other parts or accessories installed by anyone other than Chaparral;
- 13) Any boat that has been used after the discovery of a defect is or should have been discovered and such continued use causes additional or other damage to the boat; and except as described in the Limitations to Coverage above, any boat that has been used by the dealer for demonstration purposes;



## 2020 SSI SPORT/SKI & FISH



- 14) Any defect or repair requiring redesign of the Boat, except pursuant to the recall provision of the United States Federal Boat Safety Act of 1971 or the recall laws of any other foreign jurisdiction;
- 15) Any Chaparral boat acquired by a retail sales outlet from any sources other than the Chaparral Factory;
- 16) Damage, shrinkage, wear and tear, or deterioration of upholstery, carpet, graphics, and exterior canvas tops, enclosures, and weather covers (including rainwater leakage);
- 17) Rainwater leakage including rainwater leakage through canvas tops and enclosures;
- 18) Engines, outdrives, controls, batteries, propellers, air conditioners, generators, refrigerators, electronics and other accessories, components or other equipment which have been manufactured or purchased from other manufacturers, whether subject to a separate warranty or not, by such other manufacturers;
- 19) Estimates that relate to speed, fuel consumption, weight or statements made by any person other than Chaparral boats; and
- 20) Electrolysis, galvanic corrosion, crevice corrosion or any other deterioration of underwater components.

### CONDITIONS TO COVERAGE

In addition to any other conditions to coverage contained herein, the responsibility of Chaparral Boats under each of the foregoing limited warranty provision is also subject to the following conditions:

- (1) The owner must first notify the dealer from whom the boat was purchased of any claim under this warranty within the applicable warranty period and within thirty (30) days after the defect is or should have been discovered.
- (2) All costs of any nature for delivering any boat to a Chaparral dealer, the Chaparral factory, or any other point of repair authorized by Chaparral and the return thereof shall be paid by the boat owner and are not covered under this warranty. Such cost may include, but are not necessarily limited to, transportation, freight, haul-outs, blocking, storage, removal of electronics, winterization, shrink-wrapping, or re-commissioning.
- (3) All repairs, corrections or replacements shall be performed by Chaparral or a dealer or repair facility authorized by Chaparral at its sole discretion.

### STATUTE OF LIMITATIONS

To the extent permitted by applicable State law, any lawsuit with respect to any breach of warranty claim seeking revocation of acceptance or rescission, whether express or implied, must be filed within one (1) year after the cause of action has occurred regardless of the time remaining in the warranty period under the Limited Warranty.



# 2020 SSI SPORT/SKI & FISH



## LIMITATION OF COVERAGE FOR DEMONSTRATION MODELS<sup>9</sup> PURCHASED FROM CHAPARRAL DEALERS

Subsequent retail purchaser(s), who otherwise comply with this Warranty Statement, receive the balances, as they exist at the time of purchase, of the Five-Year Transferable Limited Structural Hull Warranty and the One-Year Transferable Limited Warranty, only. The period of such limited warranties shall commence on the date the boat was first used for in-water demonstration purposes by the Dealer. ALL OTHER WARRANTIES ARE EXCLUDED. Warranty Transfer fees are waived for dealer demonstrator boats.

### LIMITATION OF REMEDIES

- (1) Chaparral's obligation under this warranty is limited to the cost of repair of the warranted item or replacement thereof, at Chaparral's sole option, when returned prepaid to Chaparral or other point of repair authorized by Chaparral.
- (2) Chaparral is not liable for loss of use, loss of time, inconvenience, diminished value, economic loss, commercial loss or any consequential, incidental, general and/or special damages.
- (3) Chaparral reserves the right to use refurbished, repaired, reconditioned, or remanufactured products or parts in the warranty repair or replacement process. Any such products and parts will be comparable in performance and function to the original part and shall only be warranted for the remainder of the original warranty period.
- (4) Decisions made by Chaparral may be done so out of an abundance of customer goodwill. Accordingly, the acceptance of any returned product or part by Chaparral shall not constitute an admission that the product or part is defective.
- (5) Any products that are replaced by Chaparral become the property of Chaparral.

### OWNER'S OBLIGATION:

Warranty repairs, unless otherwise authorized by Chaparral Boats, should be performed by the selling Chaparral dealer. In the event a boat is out of the Owner's possession for more than 15 days for warranty repair, the Owner must notify Chaparral. The Owner must also notify Chaparral for any claimed defect that is not corrected after one repair attempt. Chaparral requires written notice from the Owner of any warranty claim prior to the expiration of the limited warranty. The Owner must allow Chaparral an opportunity to repair or replace parts pursuant to the terms of this Limited Warranty.

### BY ACCEPTING DELIVERY OF THE BOAT COVERED BY THIS LIMITED WARRANTY, THE BOAT OWNER UNDERSTANDS AND AGREES AS FOLLOWS:

- 1) No dealer or any other person is authorized to make on Chaparral's behalf any other warranty other than those expressly set forth herein.
- 2) Chaparral reserves the right, without notice, to make changes to or discontinue models and Chaparral shall be under no obligation to equip or modify boats built prior to such changes.
- 3) Chaparral will discharge its obligations under this warranty as rapidly as possible, but cannot guarantee any specified completion date due to the different nature of claims that may be made and services that may be required.



## 2020 SSI SPORT/SKI & FISH

---



- 4) Chaparral Boats is the registered trademark of Chaparral Boats, Inc.
- 5) Owner has inspected the boat, or if not was given an opportunity to do so, and is satisfied with the boat and its component parts.

PLEASE READ THIS STATEMENT OF WARRANTY CAREFULLY. IF YOU HAVE ANY QUESTIONS REGARDING YOUR RIGHTS AND OBLIGATIONS UNDER THIS WARRANTY, PLEASE CONTACT YOUR CHAPARRAL DEALER OR CHAPARRAL'S CUSTOMER SERVICE DEPARTMENT AT (229) 686-7481.



# 2020 SSI SPORT/SKI & FISH



## OWNERSHIP TRANSFER RECORD

Please complete the following information and return to Chaparral Customer Service with the correct transfer fee amount and a copy of the bill of sale or other evidence of purchase within 30 days after purchase from the original retail purchaser. Certified Checks or money orders should be made payable to Chaparral Boats, Inc.

\_\_\_\_\_  
**Current Owner**

\_\_\_\_\_  
**Transfer To**

\_\_\_\_\_  
**Address**

\_\_\_\_\_  
**Address**

\_\_\_\_\_  
**City, State, Zip**

\_\_\_\_\_  
**City, State, Zip**

\_\_\_\_\_  
**Hull Identification Number**

\_\_\_\_\_  
**Date of Sale**

\_\_\_\_\_  
**Signature**

\_\_\_\_\_  
**Signature**

To register the transfer, the second purchaser must mail the following to Chaparral Warranty Transfer, P. O. Drawer 928, Nashville, GA 31639 no later than thirty (30) days after the purchase from the *original* purchaser: (1) An Ownership Transfer Record completed by the *original purchaser* and the subsequent owner; (2) A copy of the bill of sale or other evidence of purchase of the boat from the *original* purchaser, including the model and hull identification number; and, (3) the warranty transfer fee as follows:

- Free for a boat properly registered as a Dealer Demo Boat
- \$500 for any H2O, Vortex, SunCoast, SSI, Sunesta, SURF, or SSX (Except 317, 347),
- \$1,000 for 270 Signature, 280 OSX, 300 OSX, 317 SSX or 347 SSX

Upon receipt of this transfer record the new owner shall receive the outstanding balance of any TRANSFERABLE FIVE YEAR LIMITED WARRANTY and the balance of the TRANSFERABLE ONE-YEAR LIMITED WARRANTY for components initiated by the original purchaser as described in the written warranty for that particular boat model. Note transferable components of the Limited Warranty vary by boat model. Subsequent owner(s) to the original purchaser shall be responsible for a \$100.00 deductible per occurrence for any claim filed in accordance with the Chaparral Limited Warranty Policy. Please refer to the Chaparral Owner's Manual for detailed provisions concerning the Chaparral Limited and Structural Warranty Policies. Chaparral Boats, Inc. reserves the right to deny transfer of warranty to subsequent owners. Questions concerning the Chaparral Warranty Policy should be submitted in writing to the Chaparral Customer Service Office, P.O. Box 928, Nashville, GA 31639.



# 2020 SSI SPORT/SKI & FISH

---



---

<sup>1</sup>First Retail Purchaser is defined as a consumer(s) who purchase a new Chaparral boat, retail, from an authorized Chaparral dealer.

<sup>2</sup> The hull is defined as the single molded fiberglass shell that rests in the water below the hull flange and its structural components consisting of the stringers and the transom.

<sup>3</sup> Structurally Defective is defined as the presence of a defect in material or workmanship that causes the referenced component to be unsafe or unfit for use under normal operating conditions.

<sup>4</sup> Fair Market Value is defined by [www.nadaguides.com](http://www.nadaguides.com) "Average Retail" as of the date of the Owner's claim.

<sup>5</sup> First subsequent owner is defined as consumer(s) who acquires a used Chaparral boat from the First Retail Purchaser, or an authorized Chaparral dealer, as evidenced by a Bill of Sale and an Ownership Transfer Record.

<sup>6</sup> Date of Delivery is defined as the date that the new boat was actually delivered to the first retail purchaser.

<sup>7</sup> The deck is defined as the single molded fiberglass shell above the hull flange

<sup>8</sup> Blistering: Blisters in the laminate on underwater gel coated surfaces larger than 1/8" in diameter and greater than 1/16" in depth

<sup>9</sup> Demonstration Model is defined as an untitled / unregistered boat with 20 or more hours usage or a boat that was registered by a Chaparral dealer as a Demonstration Model.